


61 31 133 Removing and installing/replacing AV connection socket

Necessary preliminary tasks:

- Remove [rear insert \(in storage compartment\)](#)

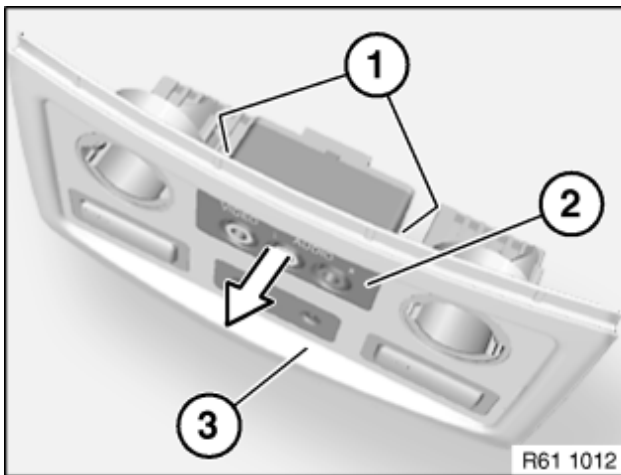

Press locks (1) together, feed AV connection socket (2) out of rear insert (3) and remove.