
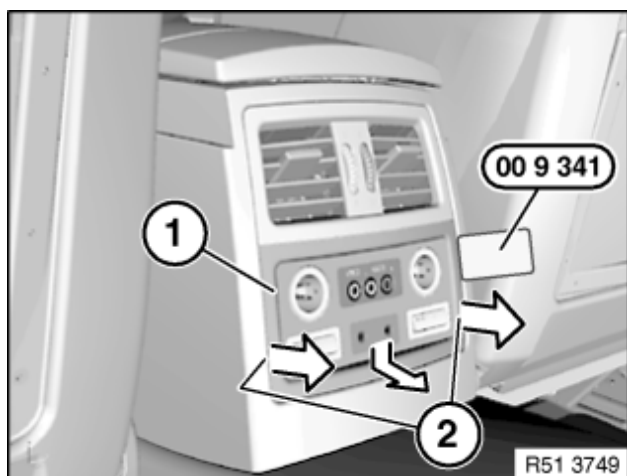


51 16 ... Removing and installing/replacing rear insert (in storage compartment)

Special tools required:

- [00 9 341](#)

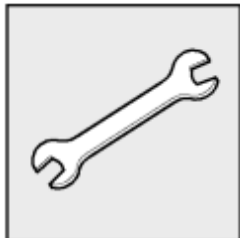

Unclip rear insert (1) with special tool [00 9 341](#) at retaining points (2) and pull back in direction of arrow.

Disconnect associated plug connections and remove rear insert (1).