*Necessary preliminary tasks:*


- Read out fault memory of DME control unit
- Switch off ignition

Note:

The installation location of the suction pressure sensor is at the rear end of the intake air manifold.

Preparatory tasks:

- Remove microfilter housing

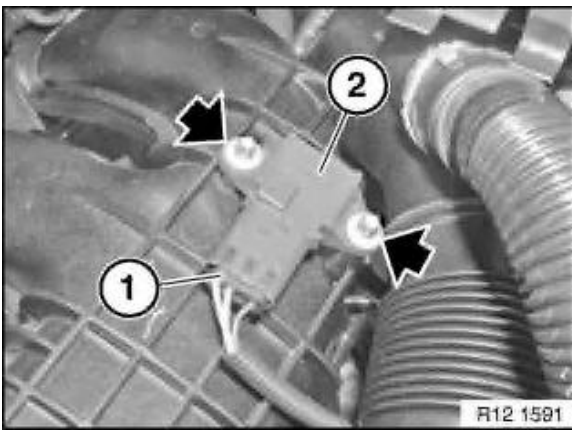

Unlock plug (1) and remove.


Release screws and pull suction pressure sensor (2) out of intake air housing.

Tightening torque 13 62 2AZ .

*Installation:*

Check sealing ring for damage, replace if necessary.

When installing, coat sealing ring with suitable antiseize agent.

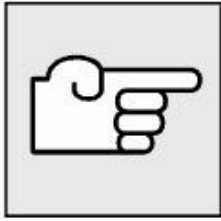

Note:
Check stored fault messages.
Now clear the fault memory.