1214 651 Replacing suction pressure sensor on charge-air duct (N54)



Necessary preliminary tasks:


- Read out fault memory of DME control unit
- Switch off ignition

Note:

The installation location of the suction pressure sensor is at the rear end of the charge-air duct.

Preparatory tasks:

• Remove suction filter housing.

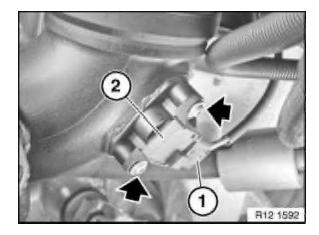

Unlock plug (1) and remove.

Release screws and pull suction pressure sensor (2) out of chargeair duct.

Tightening torque 13 62 2AZ .



Installation:

Check sealing ring for damage, replace if necessary.

When installing, coat sealing ring with suitable antiseize agent.



Note:

Check stored fault messages. Now clear the fault memory.


1371 000 Removing and installing/replacing intake filter housing (N54)



E82, E90, E91, E92, E93 only:

Necessary preliminary tasks:


- Remove microfilter housing
- Remove intake duct

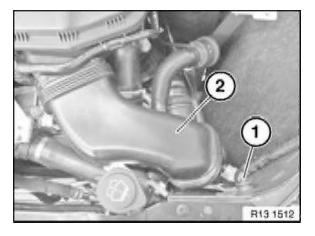

E60, E61 only:

Lift out expansion rivet (1).

Unclip air duct (2) from intake filter housing and remove.

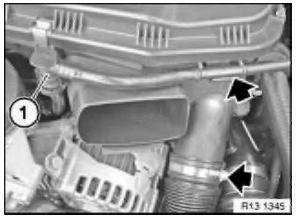


Release clamp and detach air intake hose.

Tightening torque 13 71 1AZ .

Unlock and disconnect line (1).

Unclip line (1) from air filter housing.

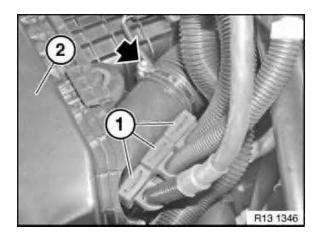

Release clamp and detach air intake hose.

Tightening torque 13 71 2AZ .

Pull off wiring harness holders (1) in upward direction.

Detach intake filter housing (2) from bearings pins of rubber mounts in upward direction and remove.

Installation:

Make sure intake filter housing rubber mounts are correctly seated on bearing pins.

13 71 Air intake silencer

	Туре	Thread	Tightening specification	Measure
1AZ Air duct, compressor 1, to intake muffler	N54	Hose clamp		3 Nm
2AZ Air duct, compressor 2, to intake muffler	N54	Hose clamp		3 Nm
3AZ Air duct, compressor 1&2, to crankcase/cylinder head	N54	M6 x 25		9 Nm
4AZ Charge-air duct to bracket	N54	M6 x 20		9 Nm
5AZ Intake duct to front wall	N54	Self-tapping screw		2 Nm
6AZ Charge-air duct Intercooler before throttle valve assembly to charge-air duct Intercooler to throttle valve assembly	N54	Screw hose clamp with tensioning spring		4.5 Nm
7AZ Raw air snorkel/ Pit sensor to charge- air duct	N54	Oval-head screw for plastic		2 Nm
8AZ Bracket, air duct, compressor 2, to cylinder head	N54	M6 x 15		9 Nm
9AZ Charge-air duct to compressor outlet	N54	V-band clamp		3.5 Nm
10AZ Charge-air duct, intercooler, to throttle-valve assembly	N54	M6x20		9 Nm
11AZ Air duct, compressor 1&2, to engine block	N54	M6x25		9 Nm
12AZ Clean air Y-pipe to intake muffler	N54	L89-96	Clamp	3 Nm
13AZ Clean air duct to clean air Y-pipe	N54	L53-60	Clamp	3 Nm
14AZ Clean air duct to EPPC bracket	N54	K50x30		3.5 Nm
15AZ Charge-air duct, cold (vehicle-fixed to engine-fixed)	N54	L65-72	Clamp	3 Nm
16AZ Rubber mount to electric fan cowl	N54	K60x45		5 Nm
17AZ Raw air diversion to lock support	N54	K50x20		6 Nm
18AZ Clean air duct to compressor 2	N54	M6		8 Nm

13 62 Senders for Control Unit

	Туре	Thread	Tightening specification	Measure
1AZ Coolant temperature sensor	N54	M12x1.5		13.5 Nm
2AZ Intake pressure sensor	N54	K50x18		3.5 Nm
3AZ Camshaft sensor to cylinder head	N54	M6x16		8 Nm
4AZ Crankshaft sensor to crankcase	N54	M6x16		8 Nm
5AZ Knock sensor to crankcase	N54	M8x30		21.5 Nm