

**Note:**

The method for removing the grip/knob is identical for manual and automatic transmissions.

Do not twist grip/knob when removing as the turning lock in the knob will shear off.

Detach grip/knob in direction of arrow with a firm tug.

*Note:*

Illustrations show E85.

**Installation:**

Fit grip/knob on shift lever, align and press on until it can be felt to snap into place.