
51 47 490 Removing and installing/replacing front underbody protection

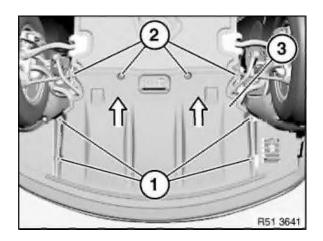

Release screws (1) and (2) and pull out underbody protection (3) from under bumper trim.

Installation:

Ensure that seals are correctly seated.

Center underbody protection (3) and tighten down screws (1) and (2).