
## 51 47 491 Removing and installing/replacing rear underbody protection



Necessary preliminary tasks:

• Remove front underbody protection

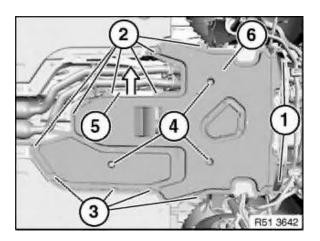

Unfasten screws (1 ... 3).

Press heat shield (5) back.

Release screws (4) and remove underbody protection (6).

Installation:

Ensure correct seating.

Center underbody protection (6) and tighten down all screws.