Fuses in glove box

Fuse-No. Amperes

	Equipment	Fuse-No.	Equipment	Fuse-No.	
	ABS, DSC	1, 25	Heated seat, left	31	
	Active backrest-width adjustment, le	31	Heated seat, right	33	
	Active backrest-width adjustment, ri	33	Heated steering wheel	28	
	Active seat, left	31	Horn	28	
	Active seat, right	33	Ignition / starter electronics	7, 15	
	Active steering	17	Independent heater	20	
	Airbag	29	Instrument cluster	13	
	Air-condition blower	3	Interior lights	11, 27	
	Air conditioning-automatic	30	Lighting	5, 6, 19	
	Air conditioning-basic	26	Navigation	35	
	CD changer	38	Radio	34	
	Central locking, front left door	10	Seat adjustment, left	14	
	Central locking, front right door	12	Seat adjustment, right	21	
	Central locking system	11, 27	Secondary air pump	2	
	Cruise control	28	Telephone	37	
	Diagnosis	29	Window lift, driver	10, 11	
(Diesel-burning heater	2	Window lift, front passenger	11, 12	
	Dynamic Drive	32	Window lift rear, driver's side	11, 22	
	Engine fan	9	Window lift rear, passenger's		
	Engine management	8	side	11, 24	
	Headlight cleaning system	18, 27	Windscreen wipers	11, 16, 27	
	Fuse-No. 1 2 3 4 5 6 7 8 9				
	 				
	Amperes 50 50 40 20 50 50 30 60 60	<u> </u>			

10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 30 5 30 \$\infty\$ 30 \$\infty\$ 30 5 30 \$\infty\$

Fuses in luggage compartment

Equipment	Fuse-No.	Equipment	Fuse-No.
ABS, DSC	66, 68	Head-up-display	65
Active cruise control	84	Luggage compartment fan	89
Adaptive head light	70	Panoramic sunroof	83
Aerial amplifier	77	PDC	69
Alarm system	51	Radio amplifier	80
Automatic-dip mirror	63	Rain sensor	55
Automatic transmission	86, 89	Rear seat heating	54, 62
Cigarette lighter	61. 82	Satellite radio (SDARS)	67
Control Display	64	Seat occupancy sensing	68
Controller	64	SMG	63, 86, 89
Current monitoring	52, 57, 60	Steering column adjustment	88
Fuel pump	50	Telephone	52, 60
Garage door opener	63	Trailer coupling	73, 74
Heated rear window	58	Video unit	73, 74 67
Headphones	65	VIGOO UIIIL	07

