
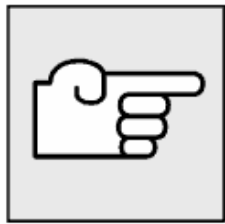


**Important!**

Observe safety instructions for raising the vehicle  
Driving without reinforcement plate is not permitted!

*Necessary preliminary tasks:*

- Remove underbody protective plate

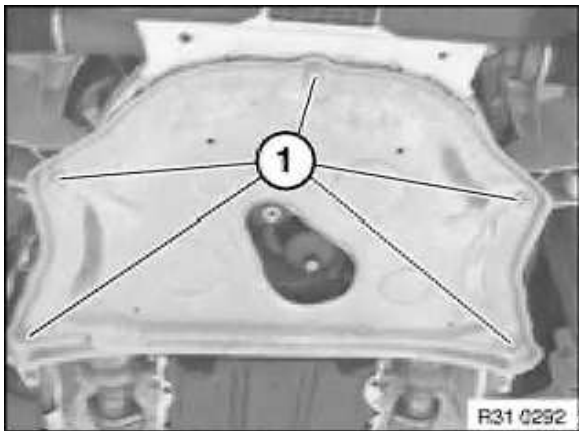


Release screws (1) and remove reinforcement plate.

*Installation:*

Replace screws and insertion nuts.

Tightening torque 31 10 9AZ .

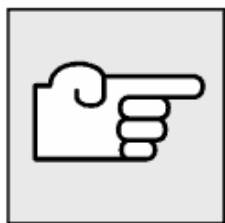**Replacement:**

If applicable, remove heat shield.