


Necessary preliminary tasks:

- Remove flap in luggage compartment panel on right
- Remove rear trim for luggage compartment floor

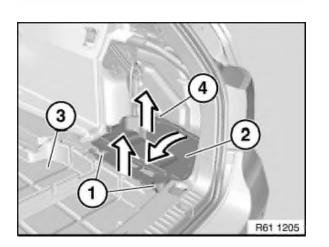

Unscrew nuts (1).

Release screw (4).

Fold back battery cover (2) in direction of arrow.

If necessary, lift luggage compartment floor storage tub (3) in area of battery cover (2).

Remove battery cover (2) towards top.