32 00 Wheel Alignment - Normal Position / Inspection Conditions E60 / E61

Car loaded down to normal position	Vehicle with complete equipment for normal operation with: 2 x 68 kg on front seats (seats in central position); 1 x 68 kg on rear seat (center); 1 x 21 kg in luggage compartment (center) and full fuel tank.
Requirements:	
	1. Correct rims and tires with uniform tire tread. 2. Correct tire pressure (refer to instruction plate on vehicle). 3. Correct wheel bearing clearance. 4. Ride height check in normal position (see above). Ride level measurement, refer to Repair instruction 31 33 095 Warning! Repair vehicle in event of deviation from specified value. Adjust correct ride height for measurement = specified value ± 2 mm by loading or unloading the vehicle.