


*Necessary preliminary tasks:*

- Remove front bumper trim.

**Warning!**

Follow instructions for handling light bulbs (exterior lights).

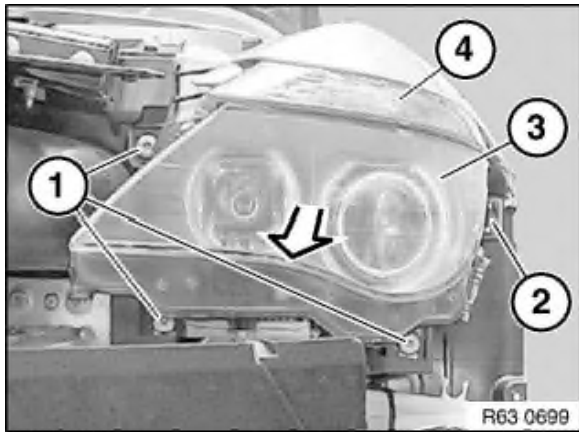

Release screws (1) and screw (2).

Installation:

Adjust headlight to fit by way of 4 screw fastening points.


Pull headlight (3) forwards slightly.

Note:

Direction indicator (4) remains fitted.

Unlock associated plug connections and disconnect.


Remove headlamp (3).

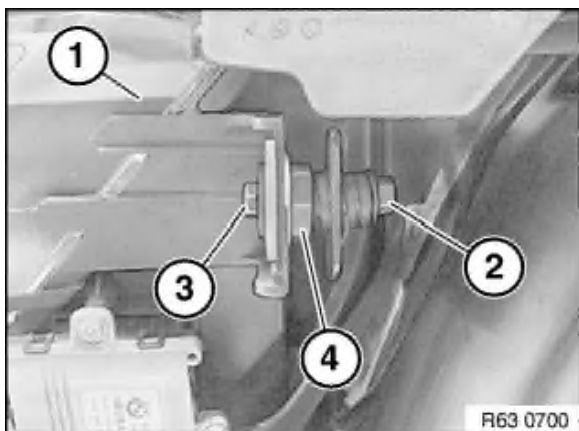Outer screw fastening point:

- Adjust headlight (1) to fit by means of adjusting screw (2).
- Tighten retaining screw (3) while simultaneously gripping nut (4).

Installation:

- Observe gap dimensions.
- Adjust headlights.

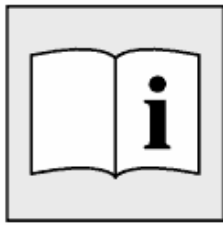

Replacement:

- Remove ignition unit and lamp for xenon headlight.
- Remove control unit for xenon headlight.
- If necessary, remove drive unit for adaptive headlight.