


00 9 310 Assembly wedges (set in plastic case)

Minimum set: Mechanical tools

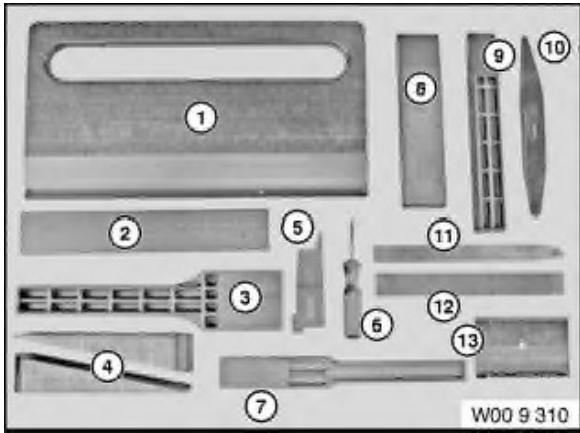

Note:

For straightening and assembly jobs on vehicle bodies, e.g. fitting trim panels, removing window weatherstrips, repairing small-scale dents, removing residual adhesive materials, measuring gap widths, levering out trim panel parts

Series:

E12, E21, E23, E24, E28, E30, E30/C, E30tou, E31, E32, E32/3, E34, E34tou, E36, E36/2, E36/3, E36/5, E36/7, E36/C, E36tou, E38, E38/3, E39, E39PL, E39tou, E46, E46/16, E46/2, E46/3, E46/5, E46/C, E52, E53, E60, E61, E63, E64, E65, E66, E67, E68, E70, E71, E81, E82, E83, E85, E86, E87, E88, E90, E91, E92, E93, R50, R52, R53, R55, R56, RR1, RR2

SI number:

1 25 05 230

Order number:

00 9 310

Assembly wedges (set in plastic case)

Consisting of:

- | | |
|---------------|-------------------------------------|
| 1 = 00 9 311 | Trim remover |
| 2 = 00 9 312 | Striking wedge, square |
| 3 = 00 9 313 | Striking wedge, large |
| 4 = 00 9 314 | Adjusting wedges (2 x) |
| 5 = 00 9 315 | Gap wedge |
| 6 = 00 9 316 | Sealing lip wedge |
| 7 = 00 9 317 | Trim panel wedge |
| 8 = 00 9 318 | Universal wedge |
| 9 = 00 9 319 | Striking wedge, small |
| 10 = 00 9 321 | Fishbone |
| 11 = 00 9 322 | Plastic wedge |
| 12 = 00 9 323 | Cleaning wedge (scraper) |
| 13 = 00 9 324 | Trim remover (metal plate) |
| 14 = 00 9 329 | Case with inlay for assembly wedges |

Note: For removing stem trims from E60

In conjunction with: 009310