



Necessary preliminary tasks:

Remove rear bumper trim.

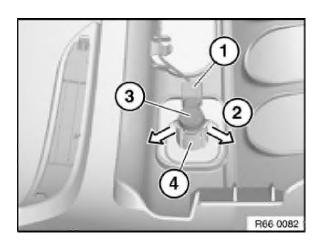

Unfasten plug connection (1) and disconnect.
Unlock catches (2) in direction of arrow and pull ultrasonic transducer (3) out of bracket (4).

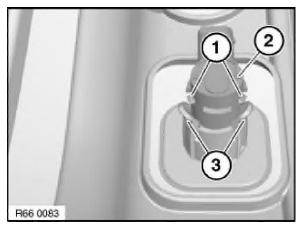

Installation:

Retaining hooks (1) of ultrasonic transducer (2) must engage exactly in mountings (3).