
#### Installation location

The eject box is located in a stowage space in the centre console and has to be retrofitted with the mobile phone on the US version (optional accessory 639).

#### Construction

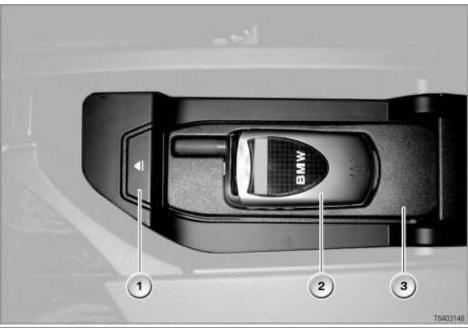

Key	Explanation	Key	Explanation
1	Eject button for Motorola Phoenix V60i mobile phone	2	Motorola Phoenix V60i mobile phone
3	Eject box with battery charger for mobile phone battery		

### Construction

The eject box is connected to the TCU (Telematic Control Unit) via a plug connector and the wiring harness. The eject box houses:

- Holder for Motorola Phoenix V60i mobile phone
- Battery charger for mobile phone battery
- Aerial connection for telephone aerial 2

## How it works

The eject box holds the Motorola Phoenix V60i mobile phone.

# Important. Lock the mobile phone in the eject box while you are driving.

This has the following benefits:

- Reduced risk of injury from loose objects inside the vehicle in the event of sharp braking.
- Continual monitoring of the charge level of the lithium ion battery and automatic recharging.

The mobile phone battery is recharged for a certain time when the vehicle is shut down (ignition lock position 0). The charging time is determined and monitored by the TCU (Telematic Control Unit).