
*Necessary preliminary tasks:*

- If necessary, remove cordless keypad handset from eject box.
- Remove fresh air grill in rear compartment.

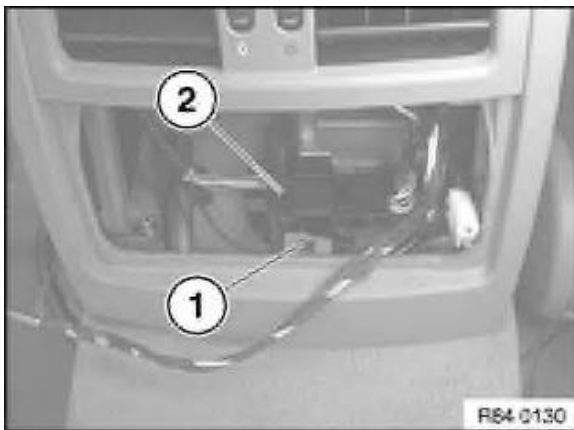

If necessary, unlock antenna connector (1) and disconnect.

Unfasten plug connection (2) and disconnect.

Unlock socketing housing on plug connection (2) and slide out contact carrier.

*Note:*

Unlock eject box (1) and fold up.

Loosen screws (2).

Feed out plug connection and remove eject box (1).

*Installation:*

Ensure correct cable routing in eject box (1).