


Original BMW Accessory. Installation Instructions.

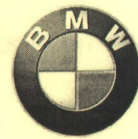

Voice input system retrofit

BMW 5 Series Saloon (E60)

BMW 5 Series Touring (E61)

BMW 6 Series Coupé (E63)

BMW 6 Series Convertible (E64)

**These installation instructions are only valid for cars with SA 609
(Professional navigation system)**

Retrofit kit No. 84 64 0 396 162

Installation time

The installation time for E60/E61 and E63 cars is approx. 1.25 hours and for E64 cars it is approx. 2.0 hours. The installation time may vary depending on the condition of the car and the equipment in it and will be increased by approx. 0.25 hours for all cars built after 03/05.

Important information

These installation instructions are primarily designed for use within the BMW dealership organisation and by authorised BMW service companies.

In any event the target group for these installation instructions is specialist personnel trained on BMW cars with the appropriate specialist knowledge.

All work must be completed using the latest BMW repair manuals, circuit diagrams, servicing manuals and work instructions in a rational order using the prescribed tools (special tools) and observing current health and safety regulations.

To avoid unnecessary extra work and/or costs, if any installation or function problems occur, after a brief troubleshooting session (approx. 0.5 hours), contact the following:

- 1. Either your national subsidiary or your regional office**
- 2. The Support team via the Aftersales Assistance Portal (ASAP) using the optional technical parts support application.**

Specify the chassis number and the part number of the installed retrofit kit and give a precise description of the problem.

Do not archive the hard copy of these installation instructions since daily updates are made by ASAP.

See ASAP for details of the pictograms.

Pictograms



Denotes instructions that draw your attention to special features.

- ◀ Denotes the end of the instruction or other text.

Subject to technical modifications.