



Necessary preliminary tasks:

- Remove rear right head restraint.
- Remove panel for roof pillar at rear left.

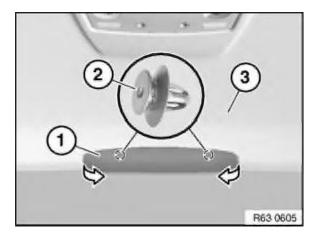

Unclip cover for auxiliary brake light (1) at points (2) and feed out sideways in direction of arrow.


Remove cover for auxiliary brake light (1) from moulded rooflining (3).

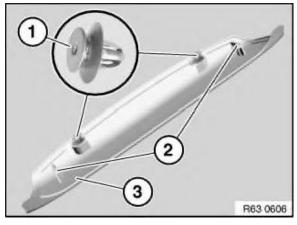


Installation:

Clips (1) and mountings (2) must not be damaged.

Make sure cover for auxiliary brake light (3) is correctly seated.

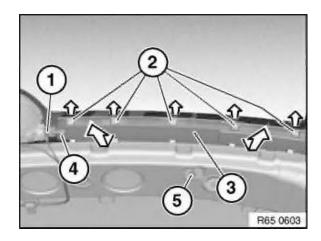

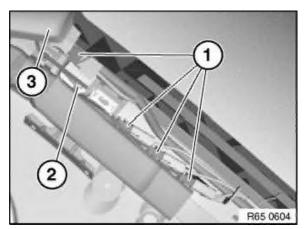

Note:

For purposes of clarity, illustration shows moulded rooflining removed.

Unfasten plug connection (1) and disconnect.

Unlock catches (2) in direction of arrow.

Feed antenna amplifier (3) in direction of arrow out of antenna amplifier mounting (4) and remove.

Installation:

Make sure moulded rooflining is correctly engaged in retainer (5).

Unlock plug connections (1) and disconnect. Detach negative lead (2) at C-pillar.

Important!

Do not kink moulded rooflining (3).

If necessary, pull rooflining (3) down a little.