

www.aftermarketbulbsshop.com


iPod Interface + Faceplate Install Instructions



All components needed to install the OEM BMW iPod interface are provided.



1. Open the glove box and you will see the divider.

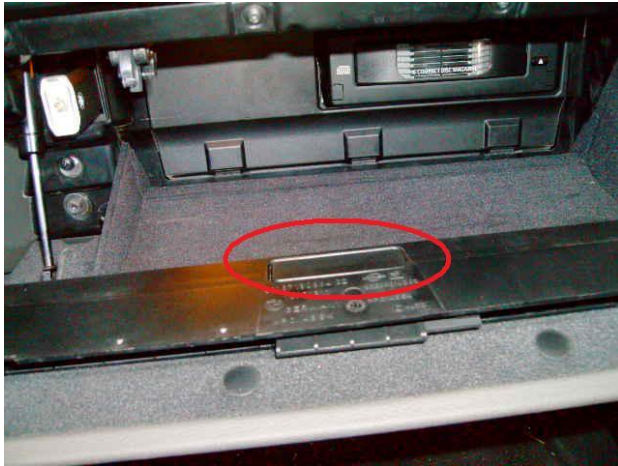

2. Remove the divider by pushing the lever located on the center-back of the divider and pulling the divider up.




3. Push in the button on the top and lower down the plate covering the fuses.



4. If you don't have a CD-Changer in place, skip to step 7. Otherwise, loosen both screws on either side of the CD-Changer. They will not come out but only loosen, so don't over loosen them.



5. Pull out the CD-Changer

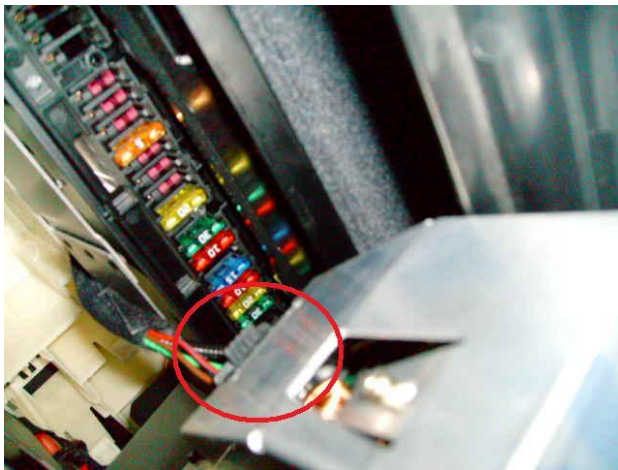

6. Disconnect the MOST connector on the back of the CD-Changer




7. Pull out the iPod Interface.



8. Connect the iPod cable to the proper connector on the iPod interface.



9. Apply the provided cushions to the top of the iPod interface.

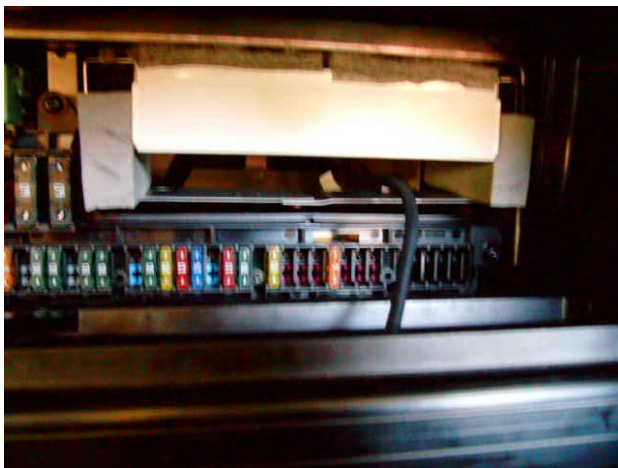


10. Fit the iPod interface into the existing bracket where the CD-Changer used to sit. I used two foam blocks to prevent the interface from moving.



11. Close plate covering the fuses.



12. Place the divider back where it was and attach an iPod/iPhone.

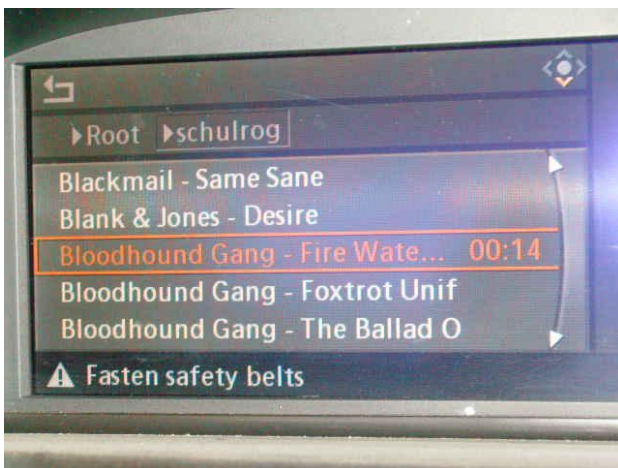

13. Enjoy!


Faceplate installation



1. Optional OEM BMW faceplate.



2. You might have to adjust the iPod interface to accommodate the faceplate.

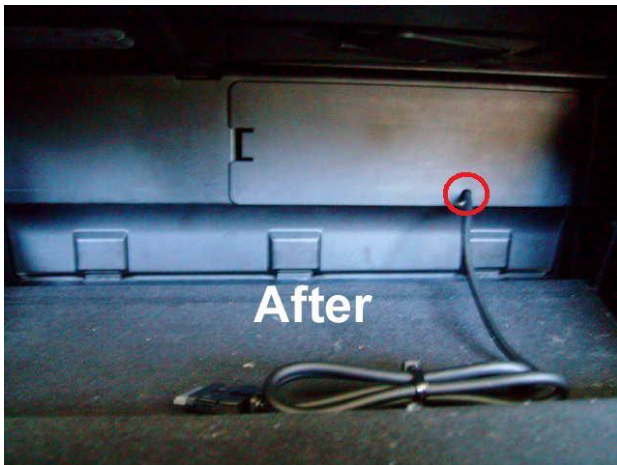

3. You will have to use a dremel or other tool to cut a small slit into the faceplate to accommodate the wire coming out. Afterwards it all looks clean like it should☺