

M5 Shift Knob installation for Steps


1. Remove shift knob by grabbing it and pull it straight up with both hands whilst wiggling it side by side.
2. Remove shift boot by pulling leather boot up



3. Remove shifter plate by pulling it up



4. Remove this plastic bushing

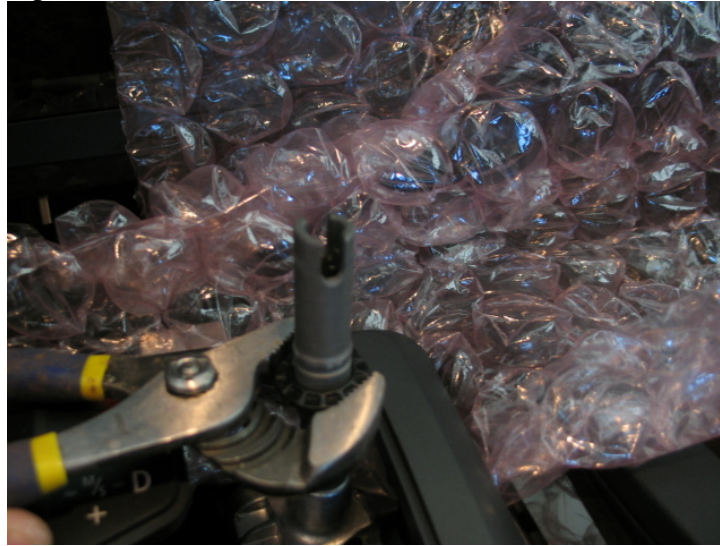

5. Cut a few seams at the bottom of the original boot big enough to accommodate M5 knob bottom



6. Insert M5 bottom like this. M5 leather does not need to be cut too short like this.




7. Tie it with plastic wire tie and cut extra part of wire tie



8. Now you get the M5 knob ready to install




9. Connect wire according to the pic

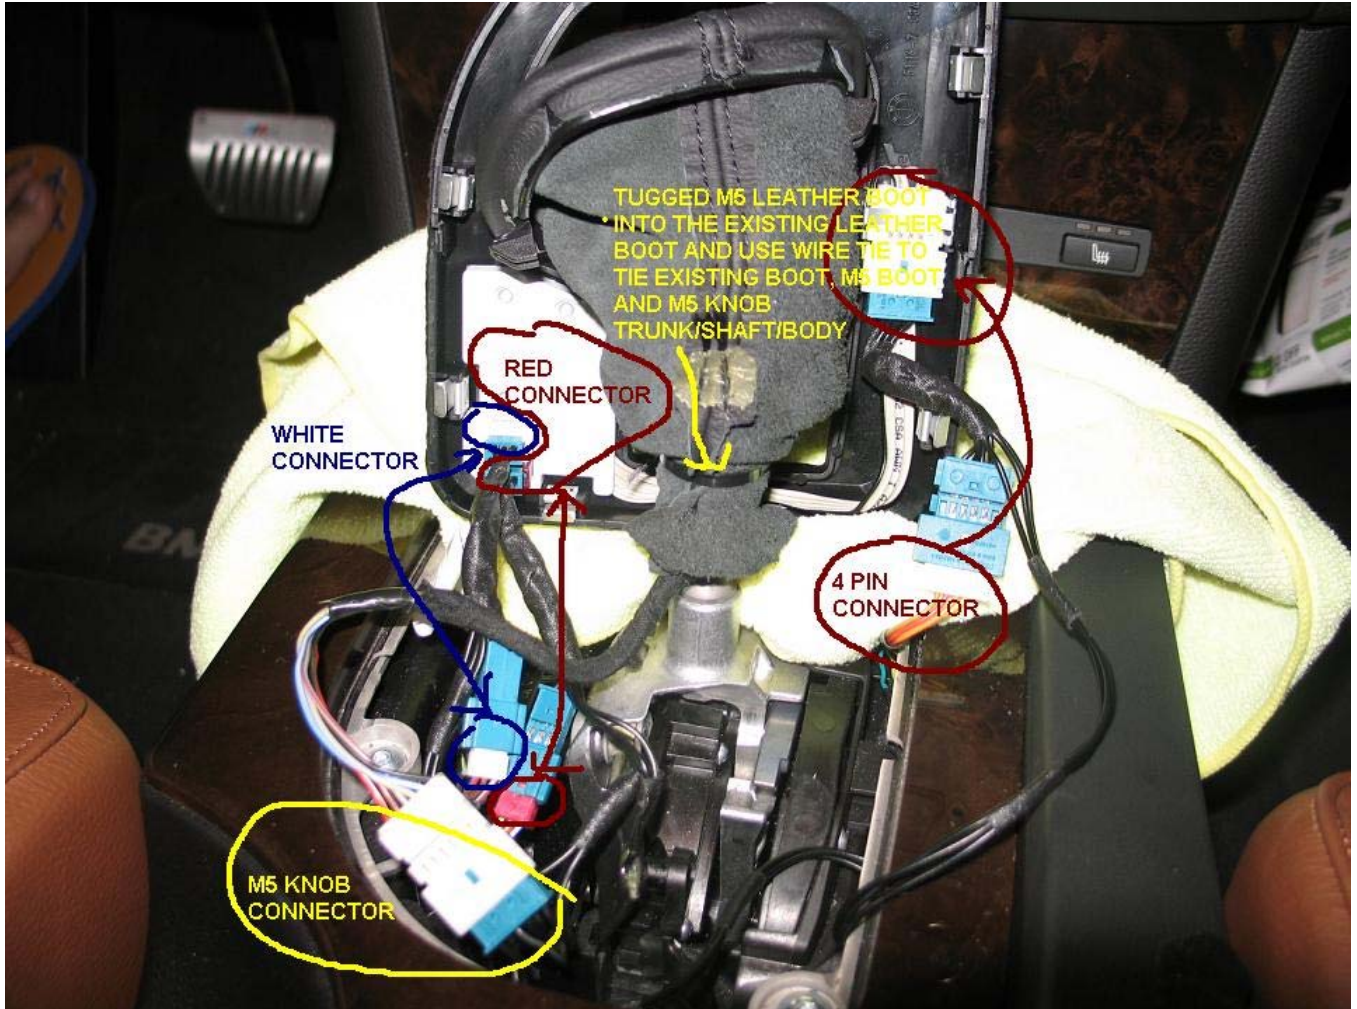


Here is more details:

9a. This is the connector you see on the right.

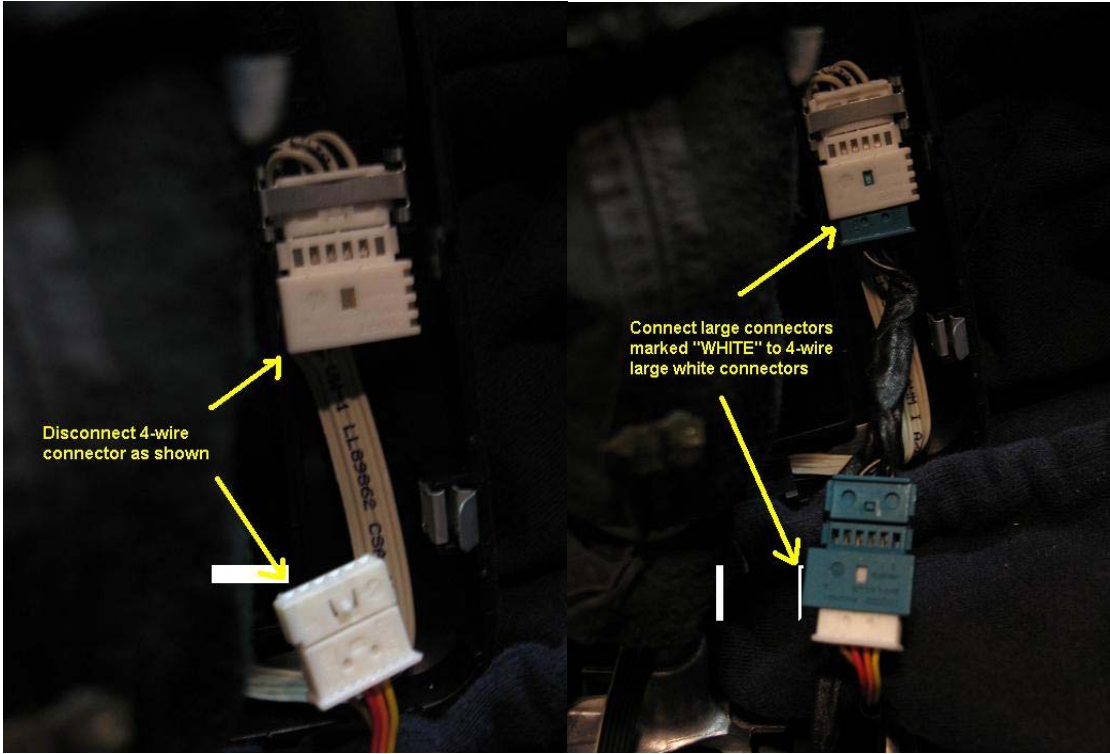

9b. These are connectors you see on the left

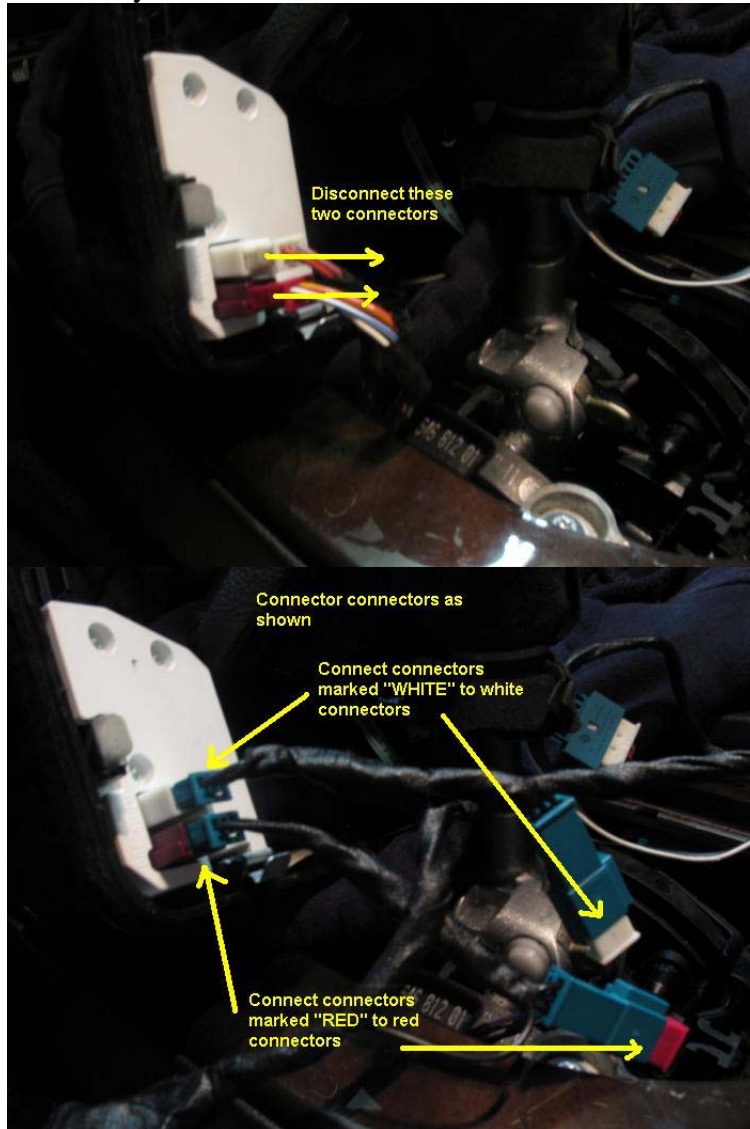

Put things back together neatly and enjoy.

