


## Sprint Booster Fitting Guide

### Step 1 >>

Remove floor mat

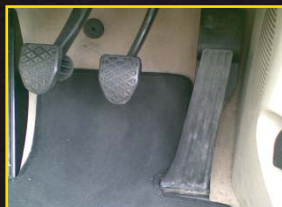

Step 1 >>

### Step 2 >>

Remove plastic cover and undo allen headed bolt



Step 2 >>

### Step 3 >>


Slide pedal upwards and then towards you  
Unplug wire connector



Step 3 >>

### Step 4 >>

Plug in the Sprint Booster Then push the body of the Booster through the hole in the carpet to allow clearance for the pedal to go back into position.

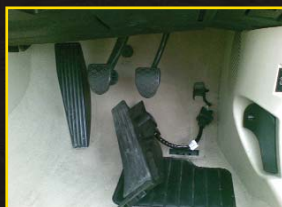

Step 4 >>

### Step 5 >>

Slide the pedal back over the metal tab on the floor and replace the bolt and plastic cap.



Step 5 >>

### Once Fitted

Sprint Booster does not affect your insurance or MOT certification