



Necessary preliminary tasks:

Not M5

- Remove middle grille
- Remove air duct trim

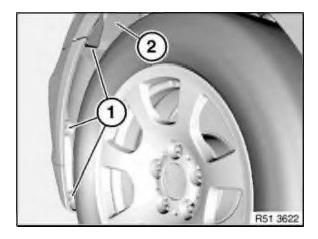

Release screws (1) on wheel arch trim (2) on left/right.

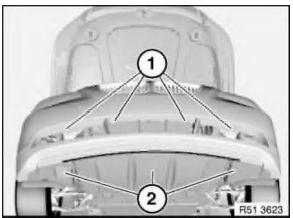


Not M5

Release screws (1).

Installation:

Make sure trims (2) are in correct position.

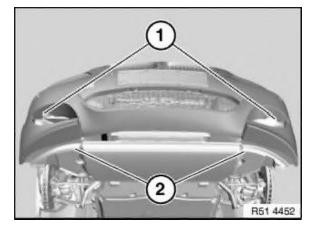


M5 only


Unscrew screws (1).

Installation:

Make sure trim (2) is in correct position.

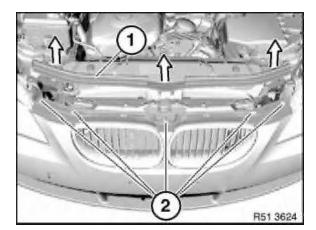

Unclip strip (1) in direction of arrow and release screws (2) underneath.

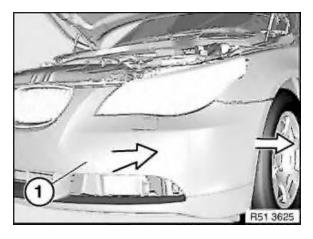


Press bumper trim (1) against direction of travel and release from holders in direction of arrow.

If necessary, disconnect plug connections on left/right fog lamps.

If necessary, disconnect right Park Distance Control plug connection.

Remove bumper trim (1) straight forwards with a 2nd person helping.

51 11 180 Removing and installing/replacing trim grill in bumper trim

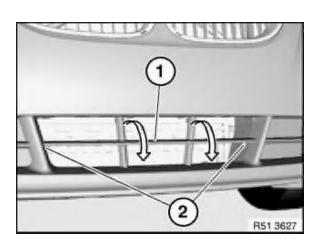

Release catches (2).


Remove grill (1) in direction of arrow.

Installation:

Retaining elements must not be damaged.

Grill must snap securely into place.

51 11 160 Removing and installing/replacing trim for air duct on bumper trim

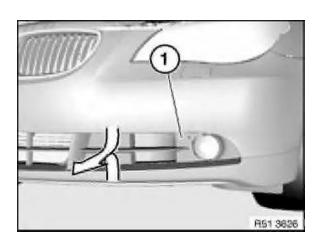

Unclip trim (1) by moving up or down. Remove trim towards front.

Installation:

Retaining elements must not be damaged. Trim must snap securely into place.