



Necessary preliminary tasks:

Detach wheel arch cover from front/rear side member cover

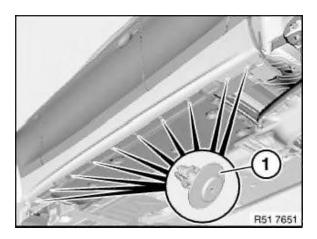


Release screws (1).

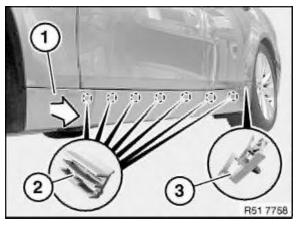


Unclip rear panel (1) from holder (3).

Unclip panel (1) at holders (2) and remove in direction of arrow.

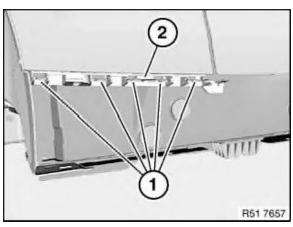

Installation:

Catches (1) on holder (2) must not be damaged.

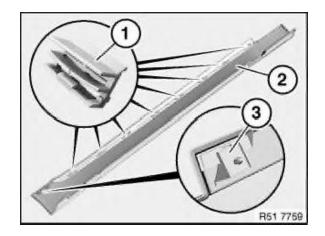


Installation:

If necessary, detach holders (1 and 3) from body and fit on panel (2). If necessary, replace faulty holders (1 and 3).



Necessary preliminary tasks:

If necessary, remove left/right front wheel

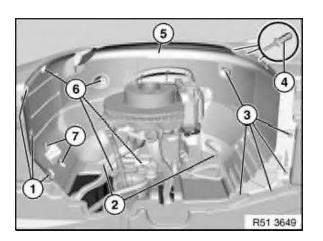

Release screws (1) and (3).

Unscrew nuts (2).

Release screws (6).

If necessary, release screws (7).

If necessary, release expander rivets (4).

Carefully feed out front wheel arch cover (5) towards top.

Installation:

Make sure front wheel arch trim is correctly seated.



Replacement:


E63 and E64 only:

If necessary, remove cover of removed wheel arch cover and install in new part.

Right side only:

If necessary, remove bottom right wheel arch cover and install in new part.

51 71 041 Removing and installing/replacing rear left or right wheel arch cover

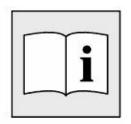

Necessary preliminary tasks:

- Remove rear wheel
- If necessary, disconnect and feed out plug from brake pad wear sensor

Note:

The operation is described on the left side; proceed in the same way for the right side.

Illustration created using E60 as an example. There may be differences in detail in the case of other vehicle models.



Unscrew nuts (2).

Release expansion rivet (4).

Carefully feed out rear wheel arch cover towards bottom.

Installation:

Make sure rear wheel arch cover is correctly seated.

