


Necessary preliminary tasks:

Version without rear console:

- Remove rear insert
- Remove rear compartment fresh air grille
- Remove rear storage tray finisher


Version with rear console:

- Remove rear console

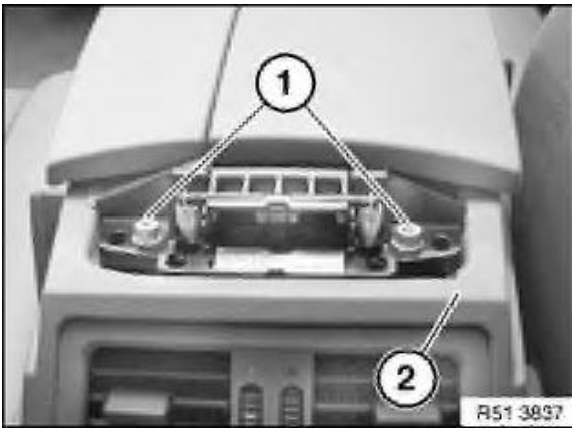

Release screws (1).

2 Centre console

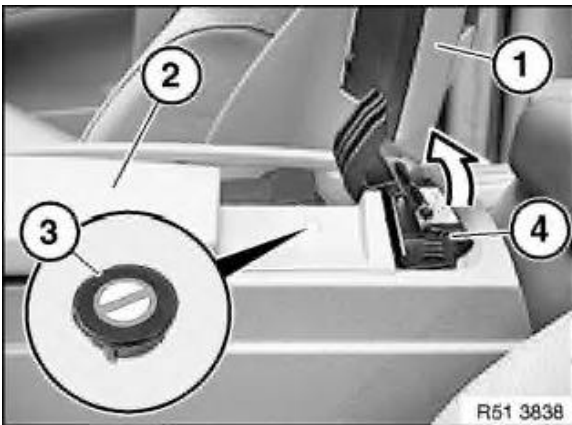


Version with centre armrest (2):

Slide centre armrest (2) forwards.


Lever out cap (3) and release screw underneath.

Open cover (1).

Feed out cover (1) with retaining plate (4) towards rear/top.

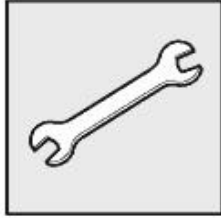
**Special tools required:**

- 00 9 341

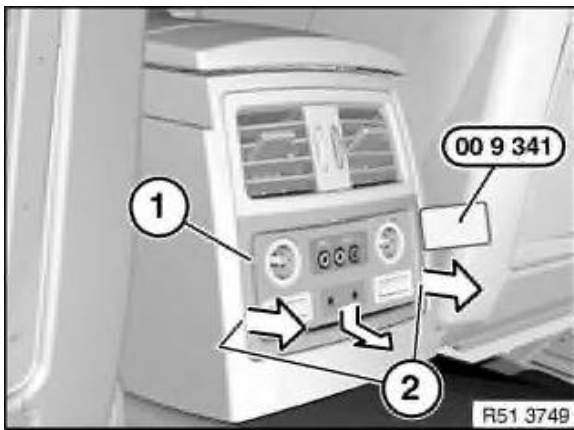


Unclip rear insert (1) with special tool 00 9 341 at retaining points (2) and pull back in direction of arrow.

Disconnect associated plug connections and remove rear insert (1).

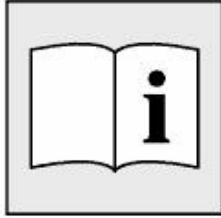*Necessary preliminary tasks:*

- Remove insert in storage compartment at rear bottom

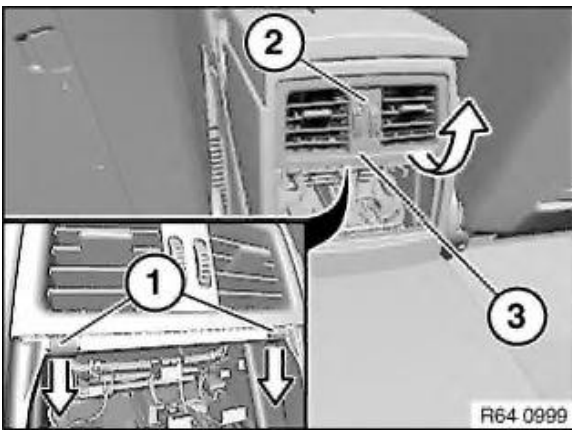


Detach clips (1) in direction of arrow.

Remove rear compartment fresh-air grille (2) in direction of arrow and unlock plug connection (3) underneath.


Installation:

Make sure rear compartment fresh-air grille (2) and clips (1) are correctly seated.

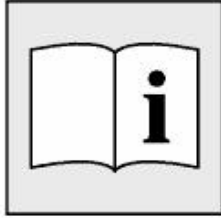

Necessary preliminary tasks:

- Remove rear compartment fresh air grill.

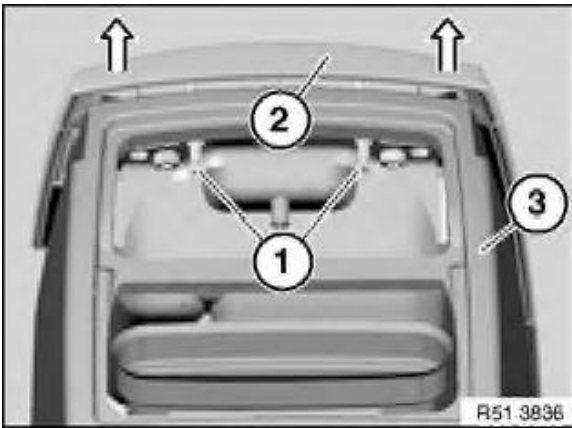

Release front nuts (1).

Note:

Do not release rear nuts!

Remove finisher (2) for storage tray at rear towards top.

3 Center console