





Necessary preliminary tasks:

Not M5

- Remove middle grille
- Remove air duct trim

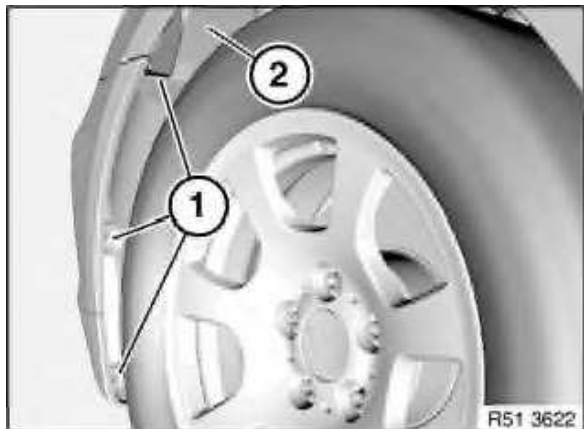

Release screws (1) on wheel arch trim (2) on left/right.

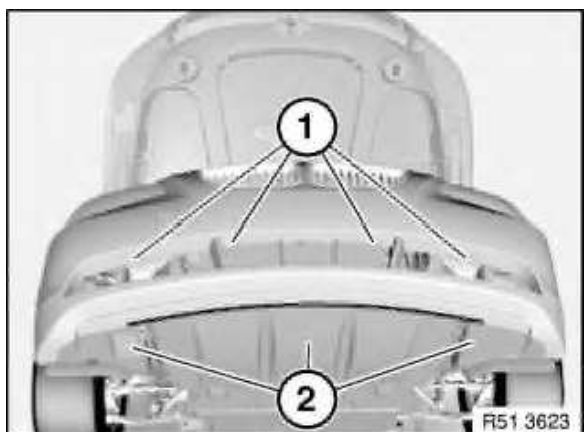


Not M5

Release screws (1).

Installation:

Make sure trims (2) are in correct position.

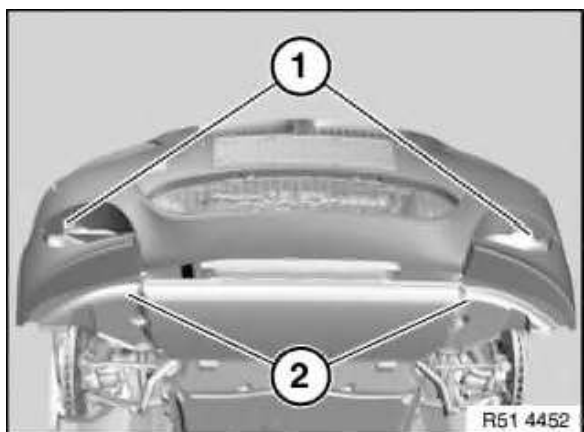


M5 only


Unscrew screws (1).

Installation:

Make sure trim (2) is in correct position.

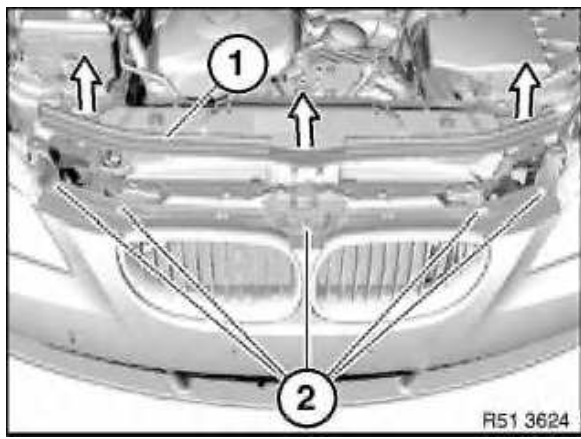

Unclip strip (1) in direction of arrow and release screws (2) underneath.

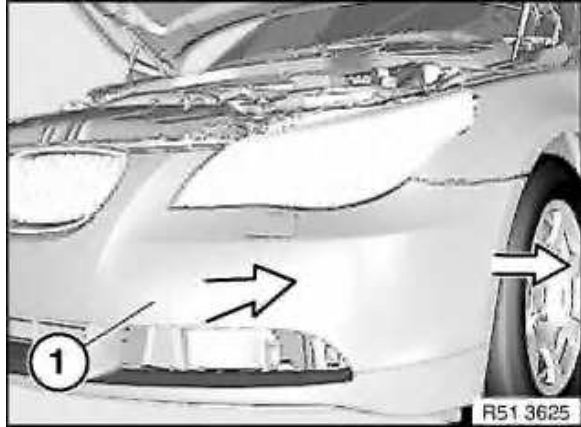

Press bumper trim (1) against direction of travel and release from side holders in direction of arrow.

Note:

The catches on the side holders are pressed down by moving the bumper trim (1) against the direction of travel. This enables the bumper trim (1) to be detached from the side.

Depending on version, disconnect plug connections from fog lamp or from Park Distance Control.

Remove bumper trim (1) straight forwards with a 2nd person helping.