


Necessary preliminary tasks:

- Remove left luggage compartment trim panel
- Remove right luggage compartment trim panel

M5 only:

- Remove guide for bumper at bottom rear

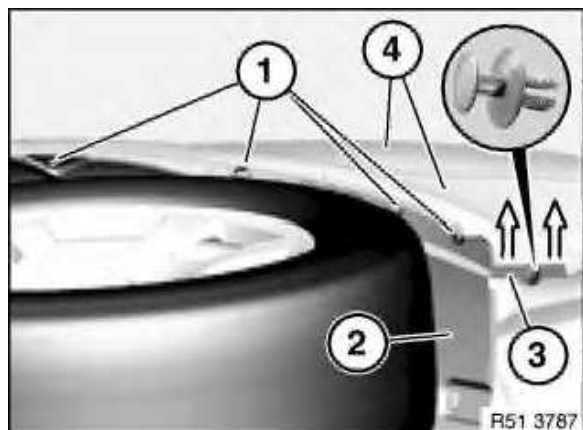


Release screws (1) from wheel arch cover (2) on left/right.

Release expansion rivet on left/right.

Pull bumper trim (4) out of mounting (3).

Installation:


Make sure bumper trim (4) is correctly positioned in relation to mounting (3).

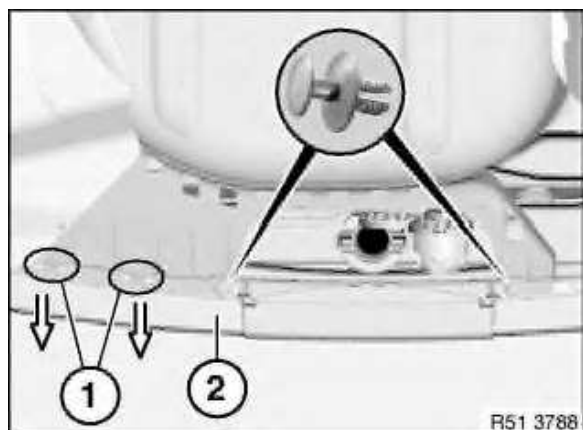

Not M5

Release expansion rivets on bottom middle guide.

Release bumper trim (2) from catches (1).

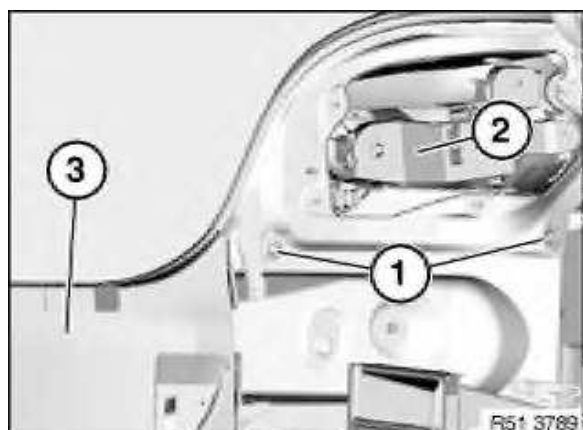

Release screws (1) with sealing washers on left/right.


2 Tail light

3 Trim, rear apron

Installation:

Replace screws (1) with sealing washers.

Tightening torque 51 16 8AZ .

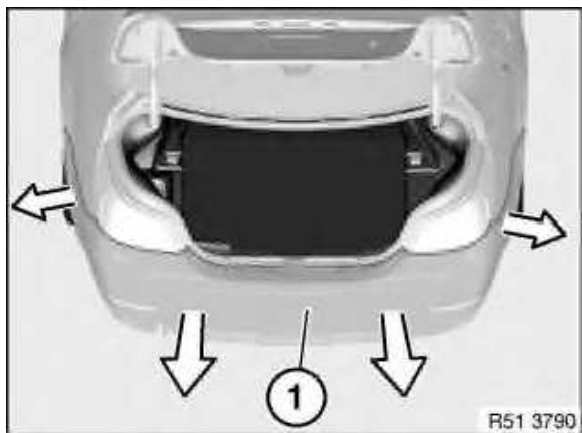

Unclip bumper trim (1) to side panel (1) on left/right outwards.
Remove bumper trim (1) in direction of arrow towards rear.

With optional extra PDC:

Disconnect plug connection (wiring harness) of ultrasonic transducers.