


Ignore all the stuff in yellow if you aren't installing the automatic roller cargo cover

A6, X609, N42a, X10385, X10638, A204a, X1771, X10383

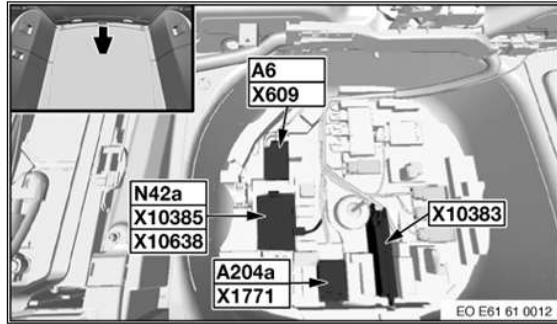


A204a Trunk lid lift

Connector overview

Number	X-pin, color	Description
X1771	15-pin, natural	Component connector Trunk lid lift

Pin assignments at plug connector X1771

Pin	Type	Description / Signal type	Connection / Measuring notes
1	A	Pump signal, trunk lid/tailgate open	Hydraulic pump, automatic trunk lid/tailgate
2		Not occupied	
3	M	Ground	Ground point
4	E	Signal, trunk lid contact	Connector X1297
5	AE	CAN bus high	CAN-bus connector
6	A	Pump signal, trunk lid/tailgate closed	Hydraulic pump, automatic trunk lid/tailgate
7		Not occupied	
8		Not occupied	
9	A	Supply, angle of rotation sensor, automatic trunk lid/tailgate	Angle of rotation sensor, automatic trunk lid/tailgate
10	E	Signal, angle of rotation sensor, automatic trunk lid/tailgate	Angle of rotation sensor, automatic trunk lid/tailgate
11	E	Rear lid open signal	Interior trunk lid/tailgate button, automatic trunk lid/tailgate
12	AE	CAN bus low	CAN-bus connector
13	M	Sensor ground	Angle of rotation sensor, automatic trunk lid/tailgate
14	A	Signal, hydraulic valve, automatic trunk lid/tailgate	Hydraulic pump, automatic trunk lid/tailgate
15	E	Supply terminal 30	Fuse F76

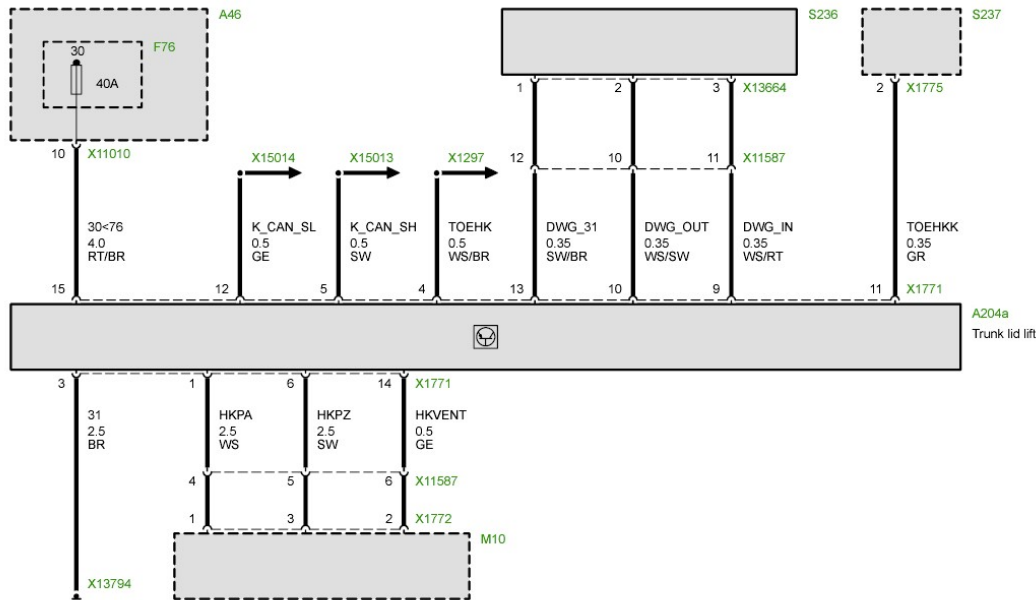

E60 E61 A204a Rear-lid lift