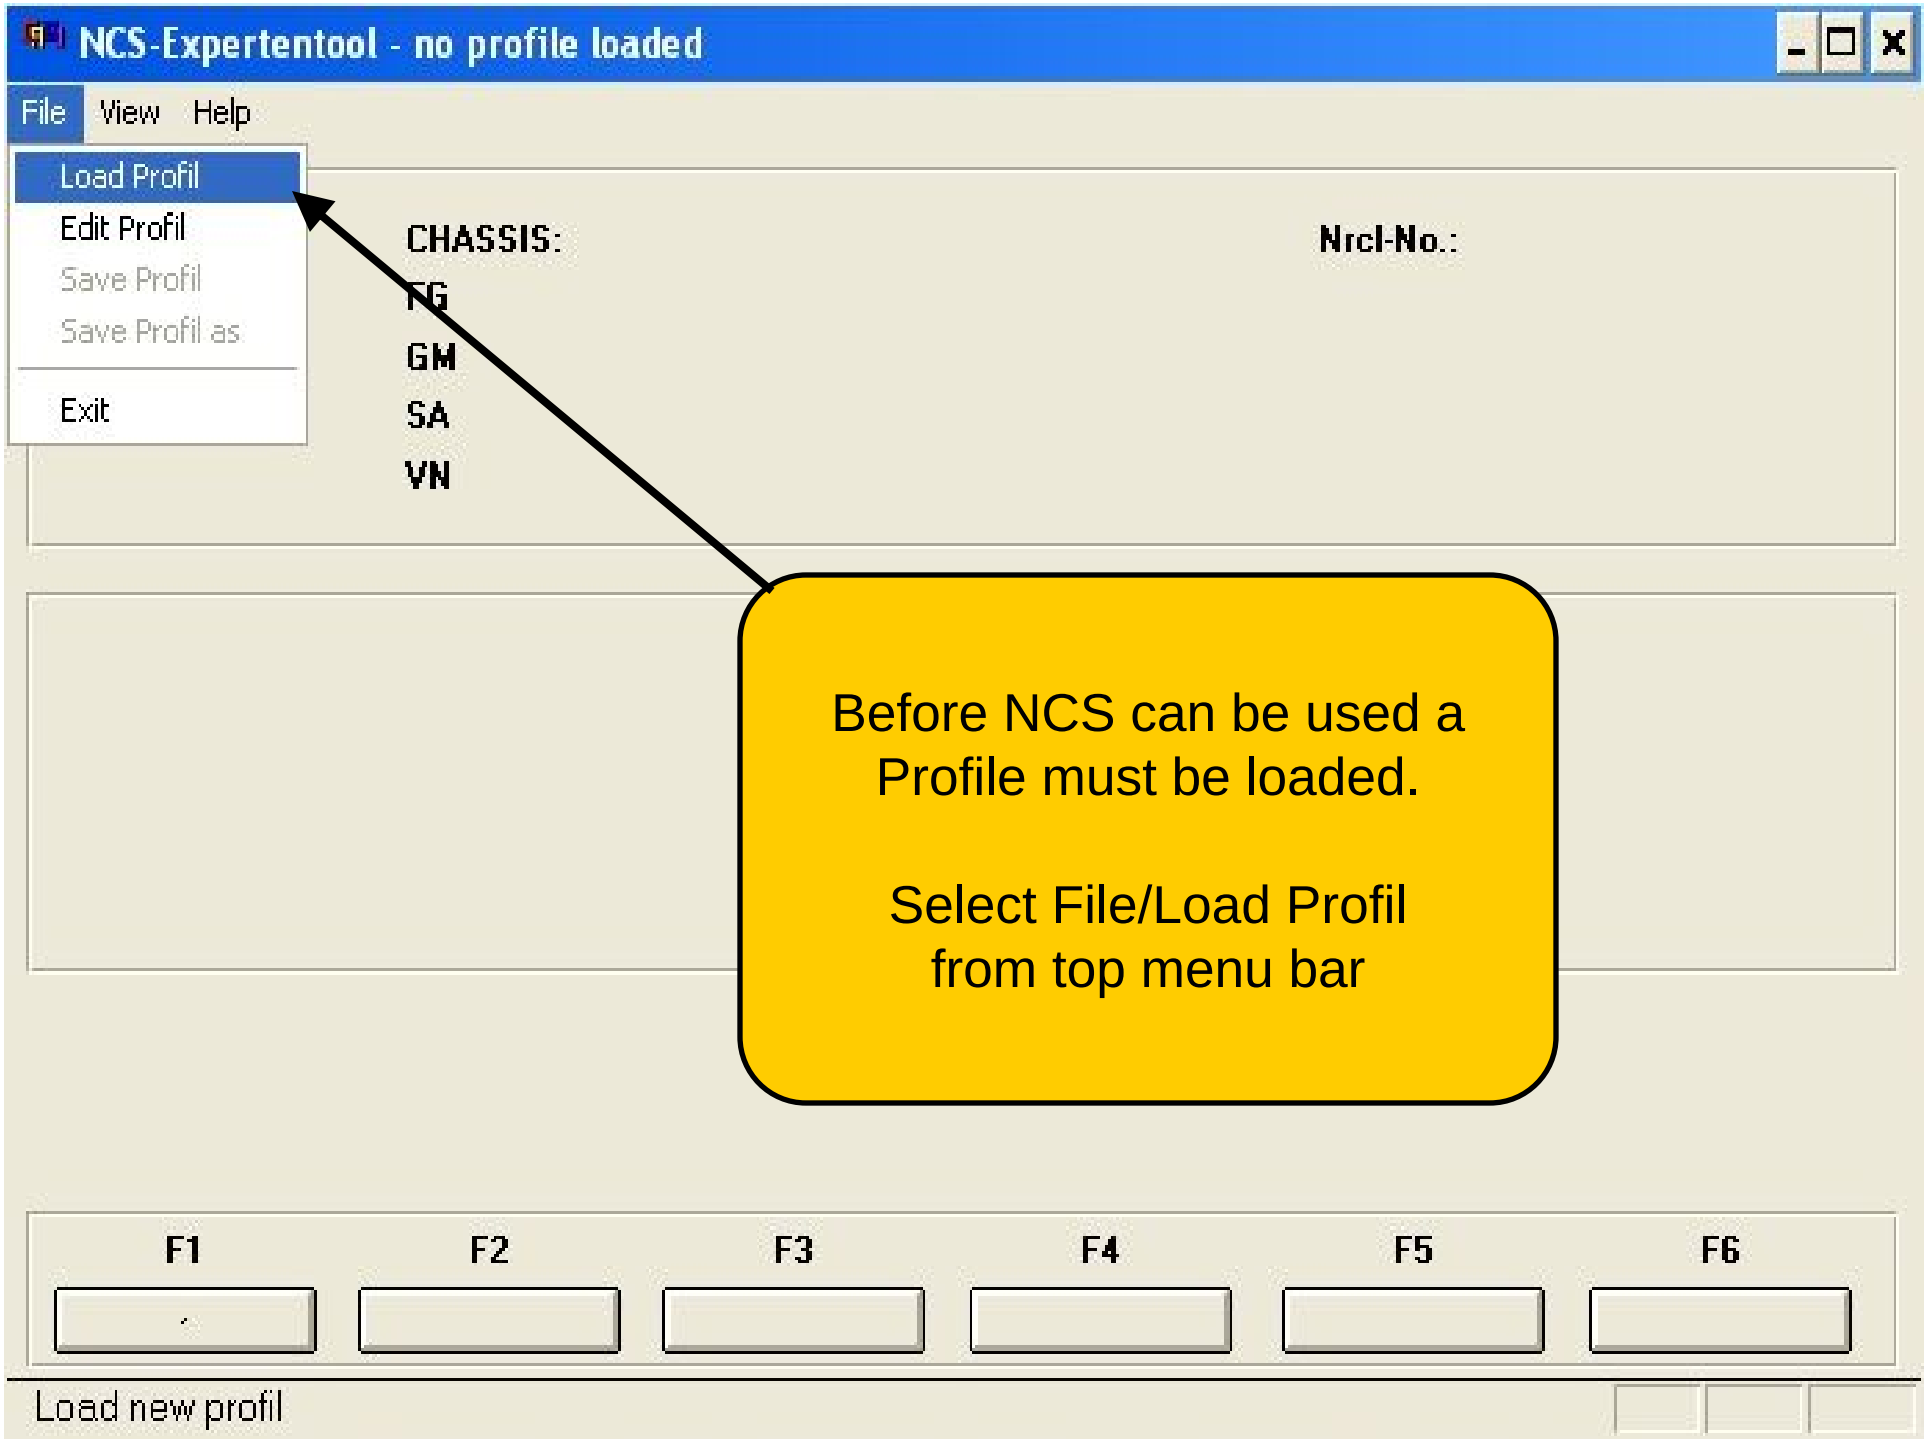
NCS-Expertentool - no profile loaded
File
View
Help
Load Profil
Edit Profil
Save Profil
Save Profil as
Exit
CHASSIS:
Nrcl-No.:
FG
GM
SA
VN
Before NCS can be used a Profile must be loaded.
Select File/Load Profil from top menu bar
F1
F2
F3
F4
F5
F6
Load new profil

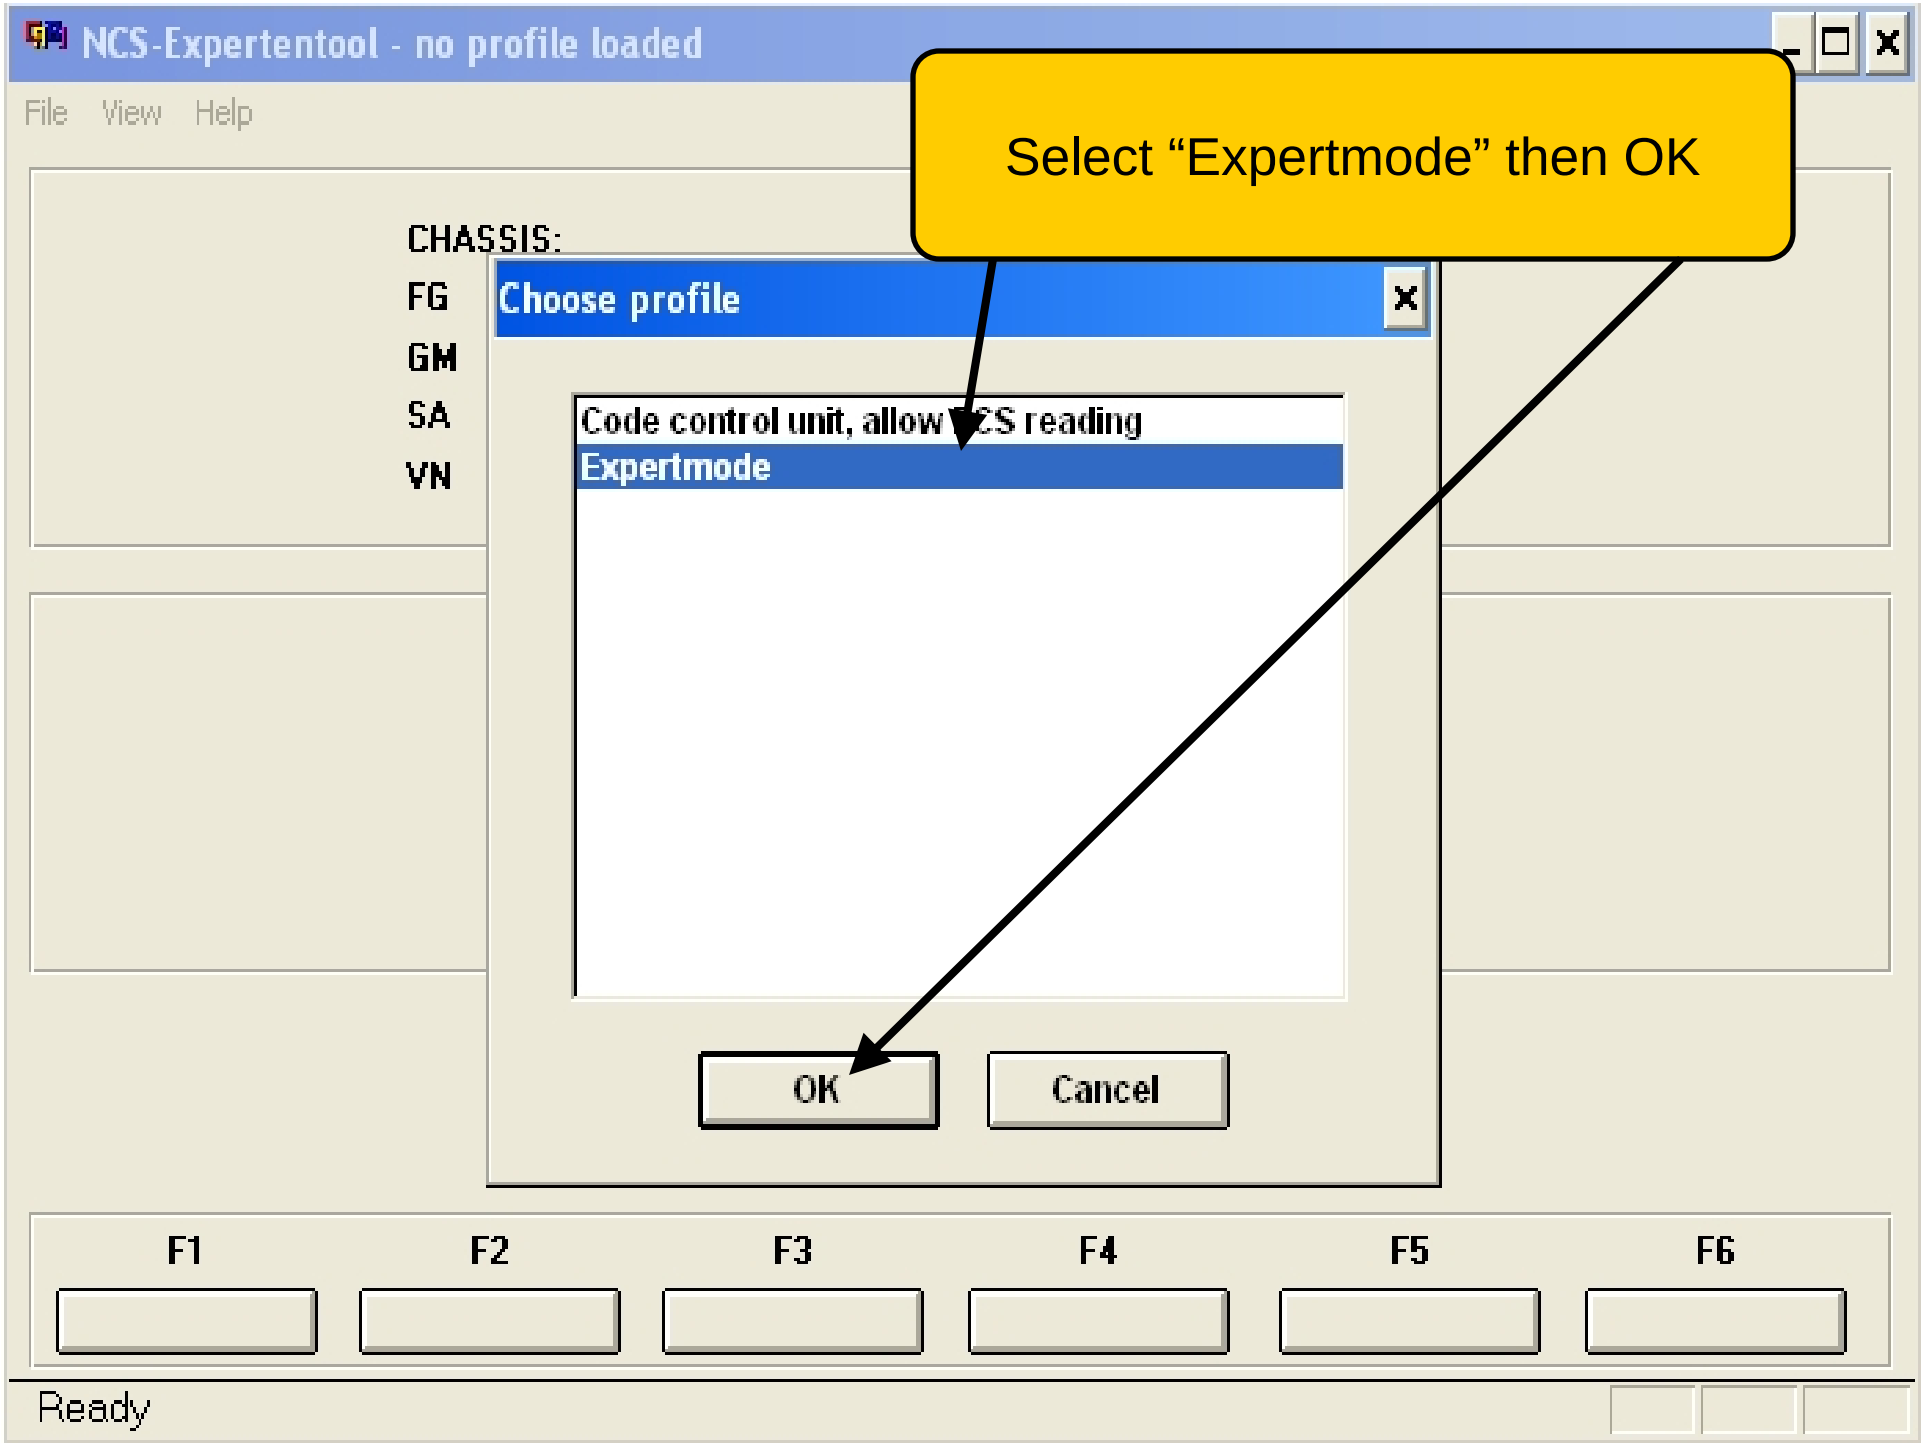
NCS-Expertentool - no profile loaded
File View Help
CHASSIS:
FG
GM
SA
VN
Choose profile
Code control unit, allow CS reading
Expertmode
OK
Cancel
F1
F2
F3
F4
F5
F6
Ready
Select “Expertmode” then OK

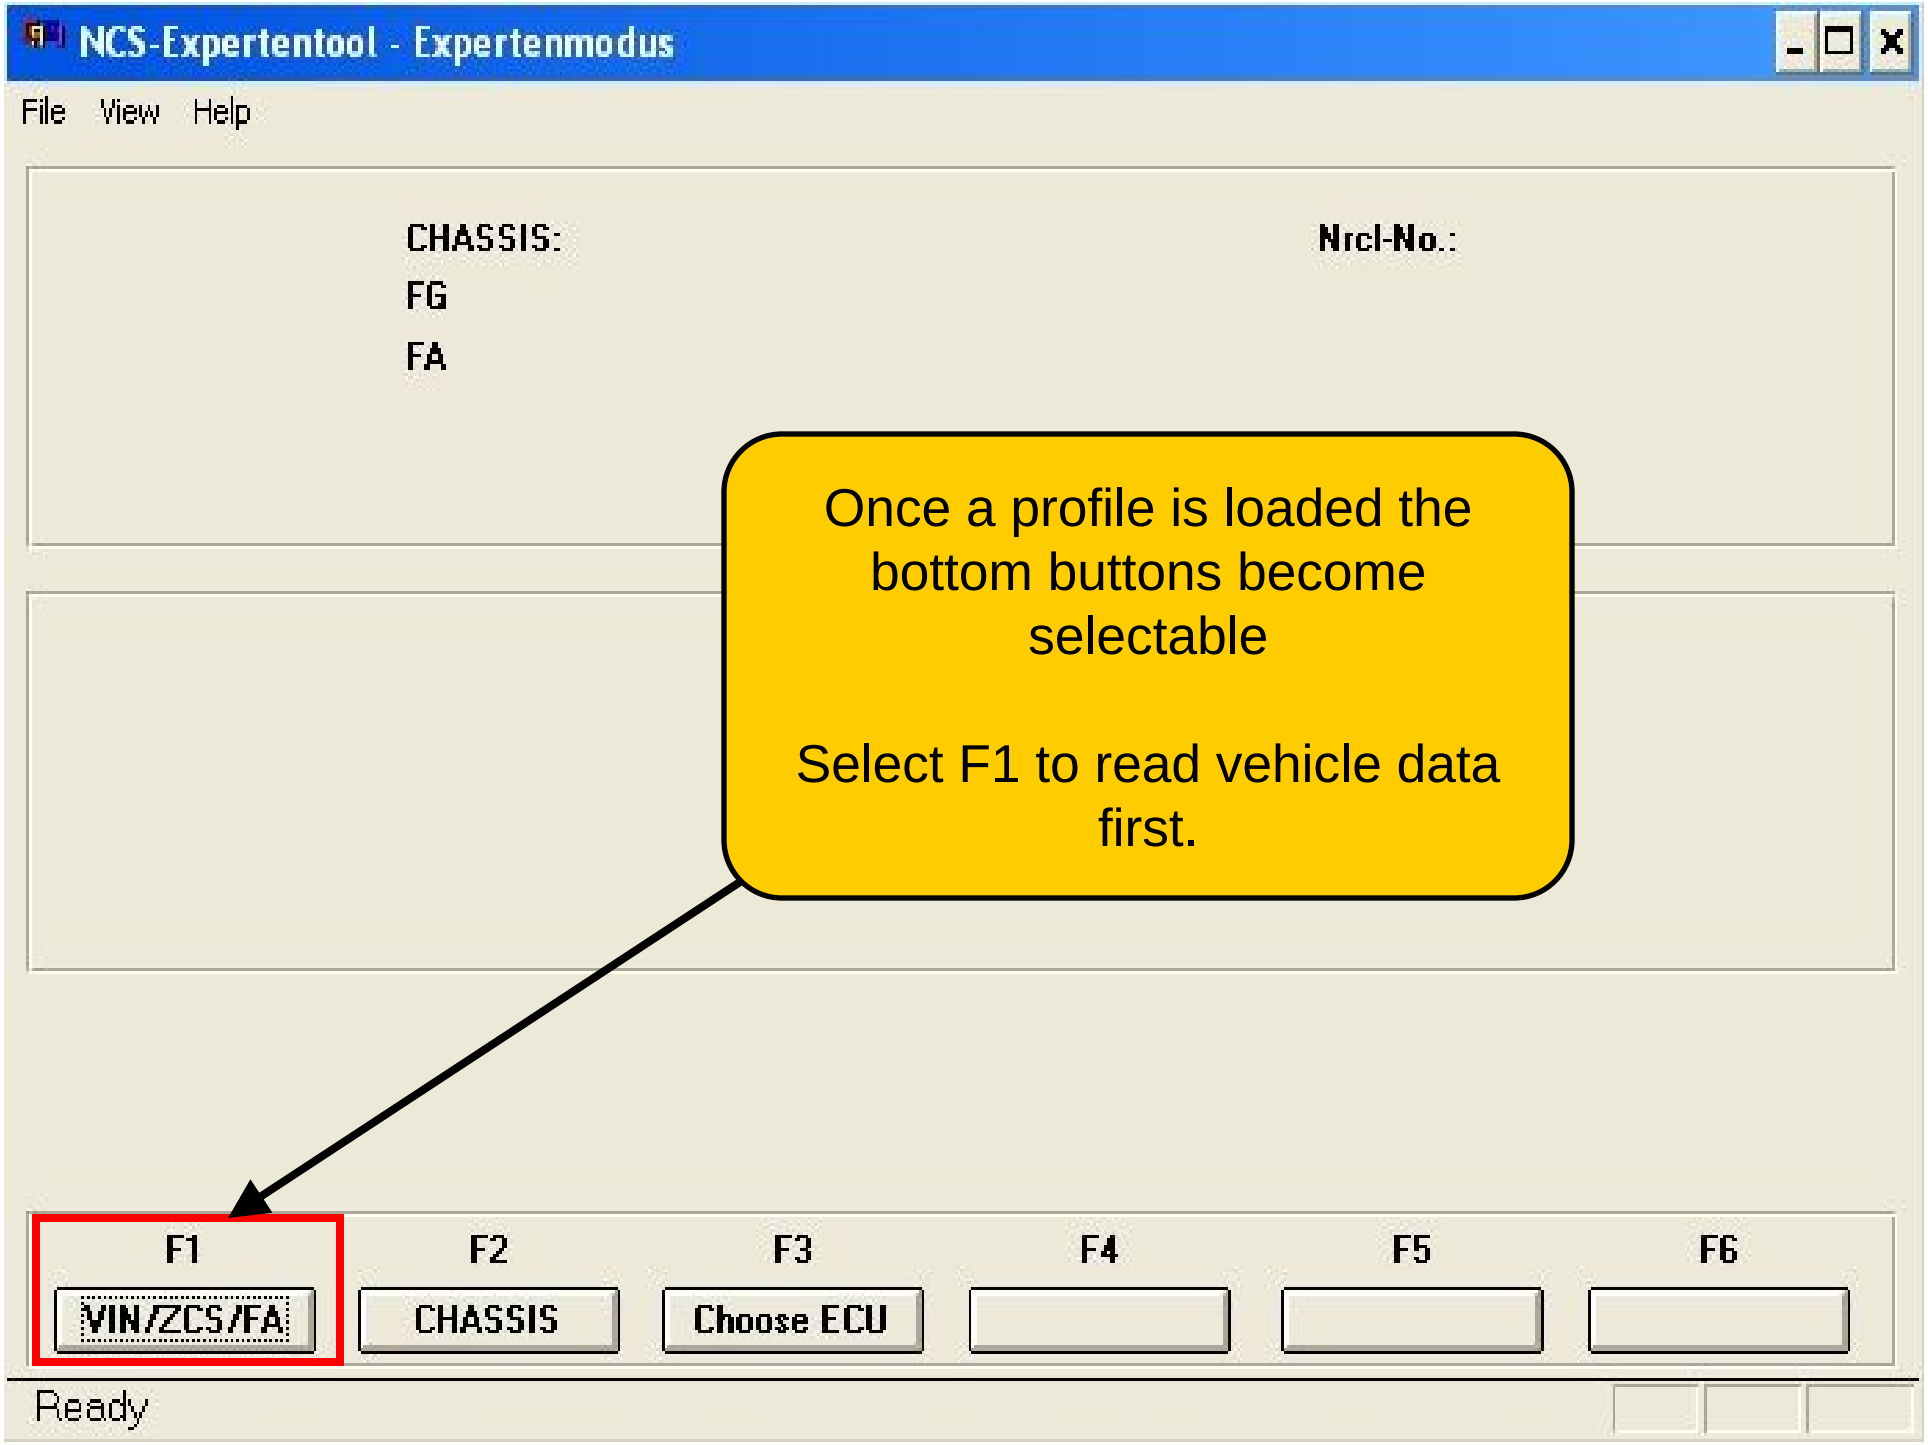
NCS-Expertentool - Expertenmodus
File View Help
CHASSIS:
Nrcl-No.:
FG
FA
Once a profile is loaded the bottom buttons become selectable
Select F1 to read vehicle data first.
F1
F2
F3
F4
F5
F6
VIN/ZCS/FA
CHASSIS
Choose ECU
Ready

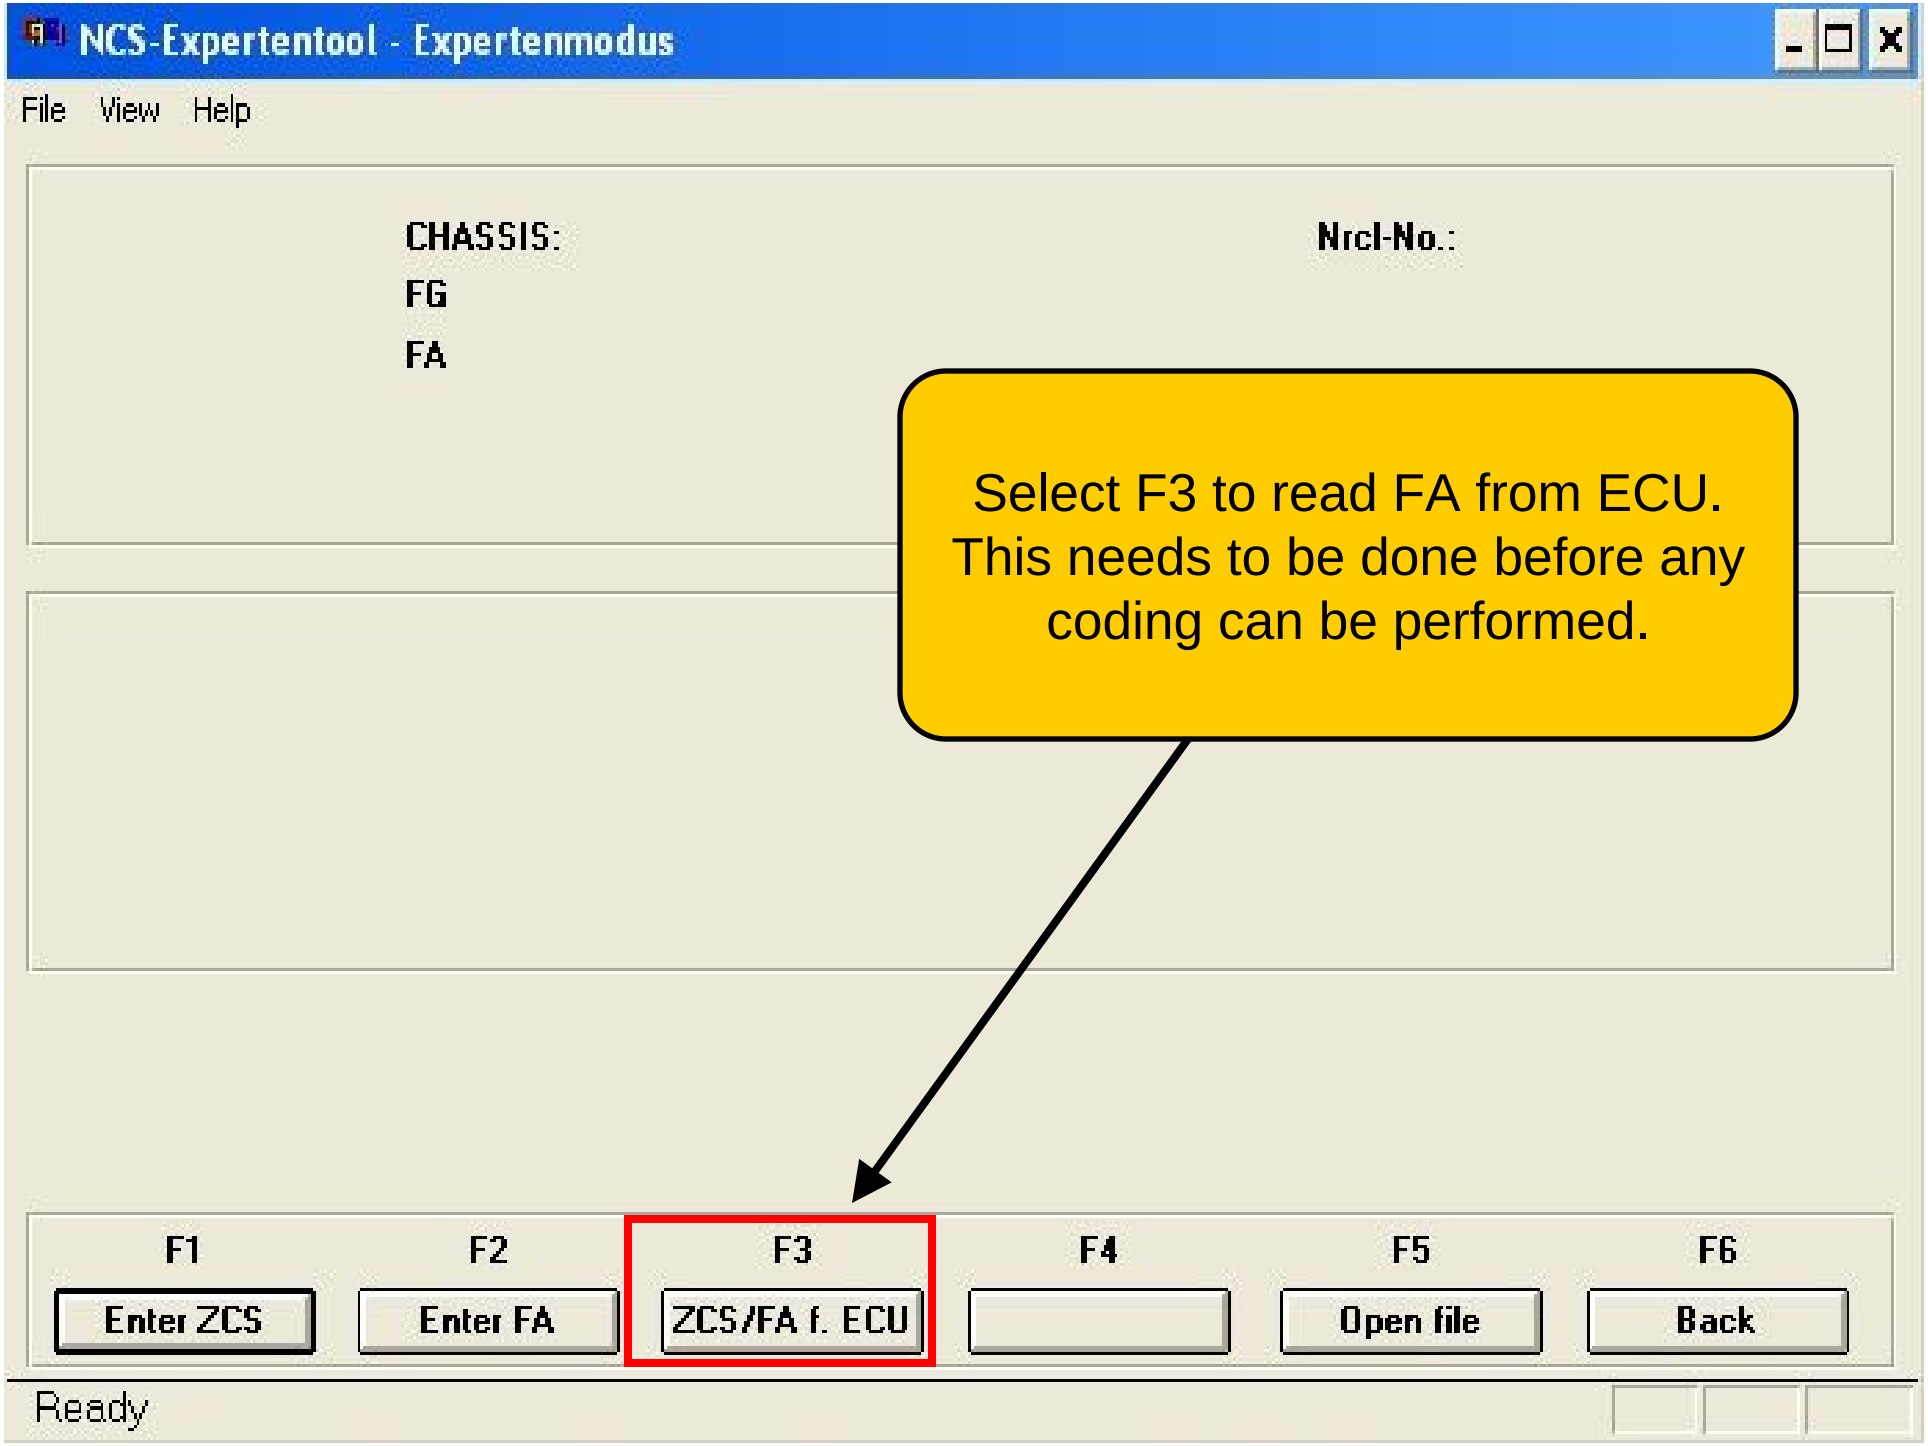
NCS-Expertentool - Expertenmodus
File View Help
CHASSIS:
FG
FA
Nrcl-No.:
Select F3 to read FA from ECU. This needs to be done before any coding can be performed.
F1
F2
F3
F4
F5
F6
Enter ZCS
Enter FA
ZCS/FA f. ECU
Open file
Back
Ready

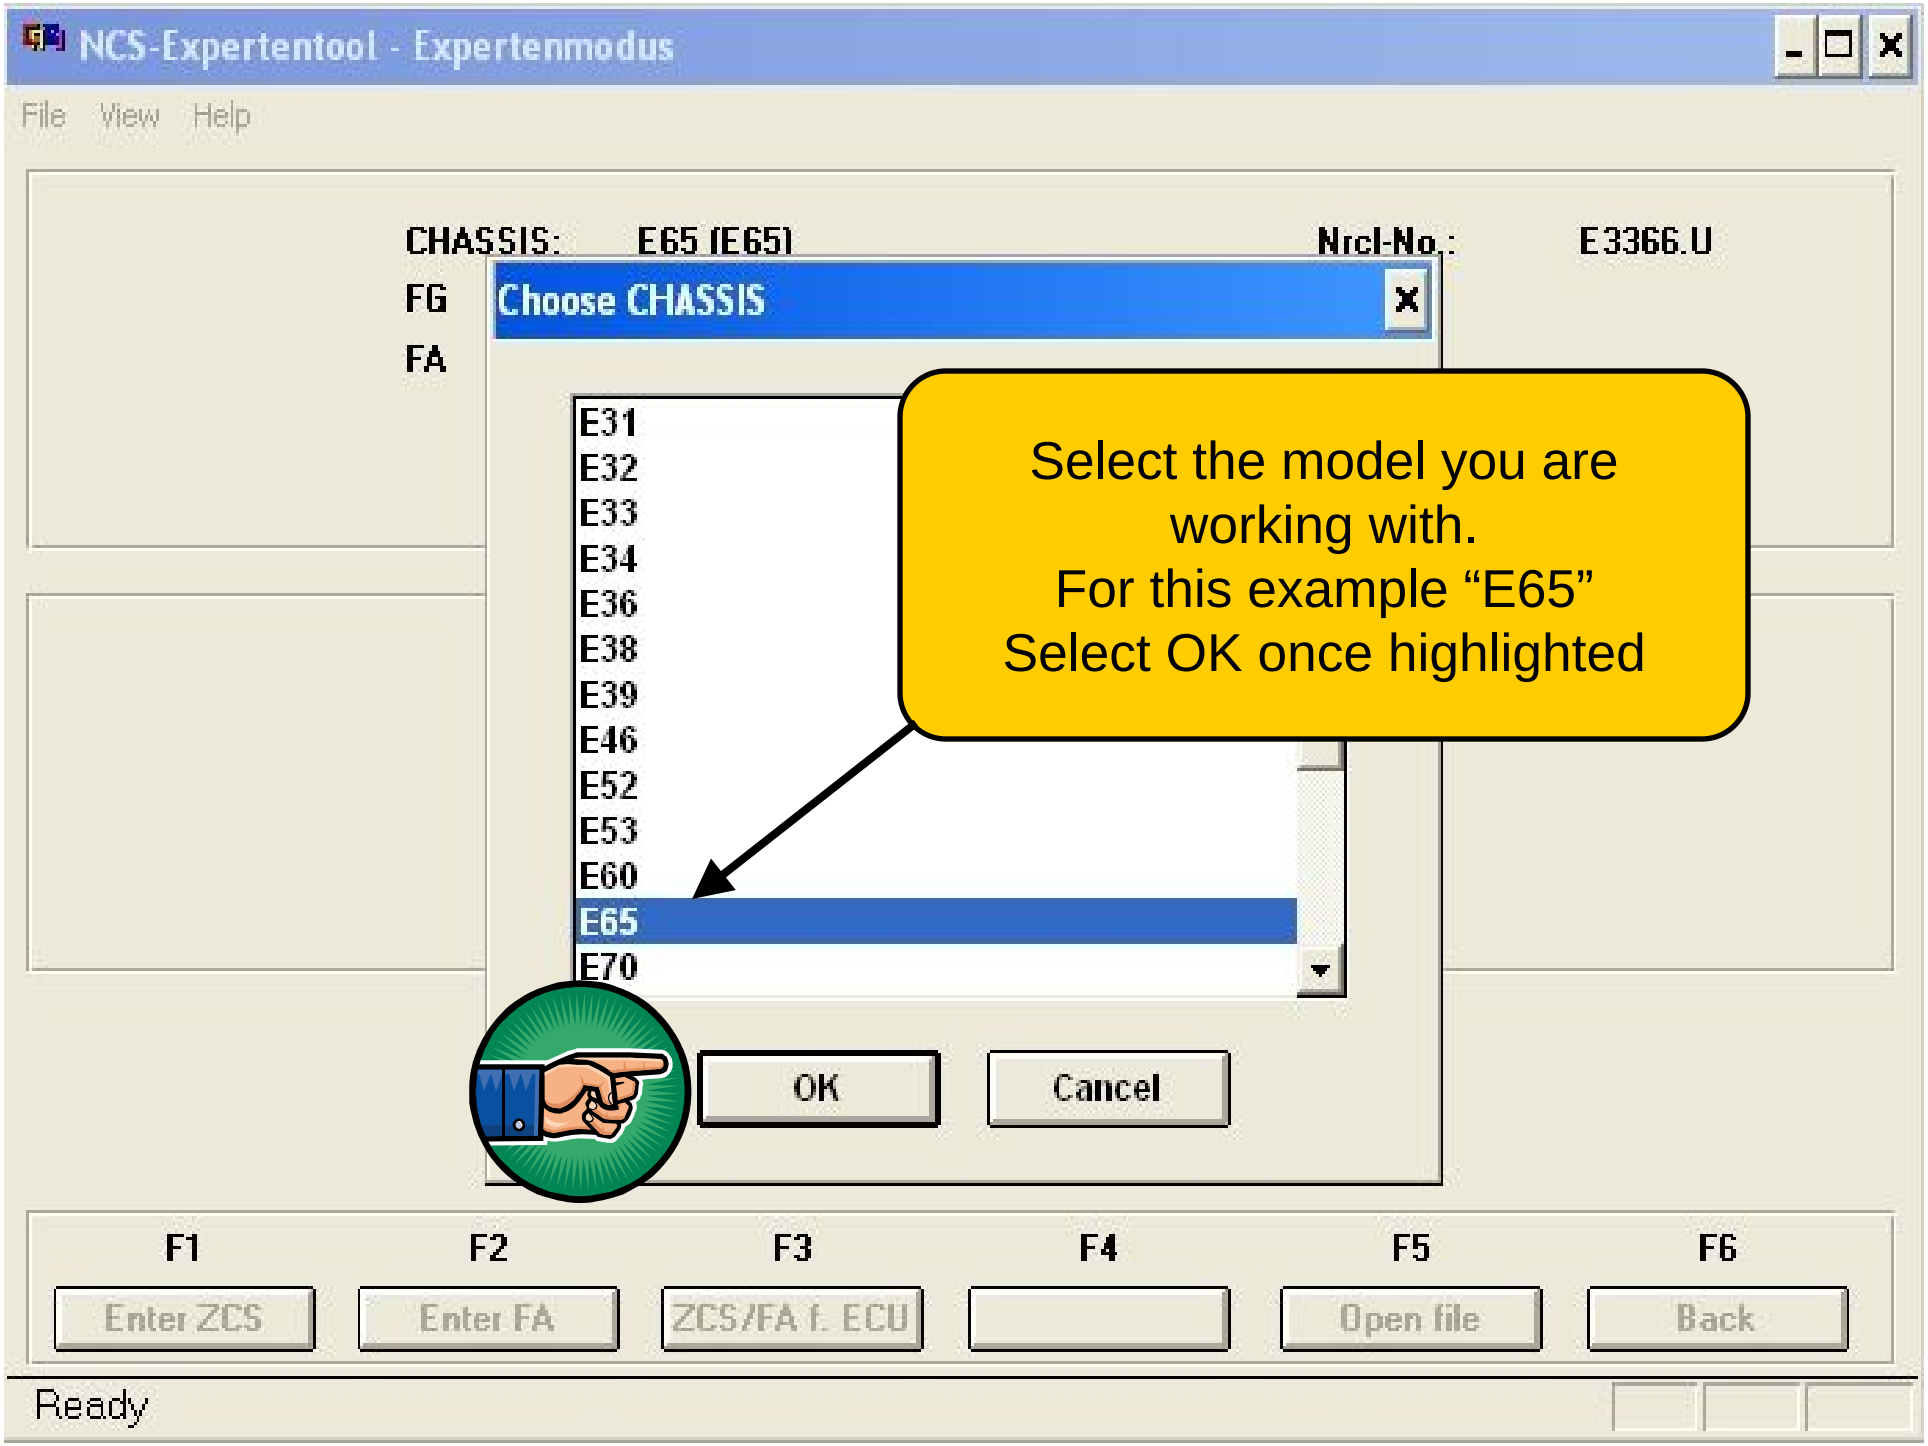
NCS-Expertentool - Expertenmodus
File View Help
CHASSIS: E65 (E65)
Nrcl-No.: E3366.U
FG
FA
Choose CHASSIS
E31
E32
E33
E34
E36
E38
E39
E46
E52
E53
E60
E65
E70
OK
Cancel
Select the model you are working with.
For this example “E65”
Select OK once highlighted
F1
F2
F3
F4
F5
F6
Enter ZCS
Enter FA
ZCS/FA f. ECU
Open file
Back
Ready

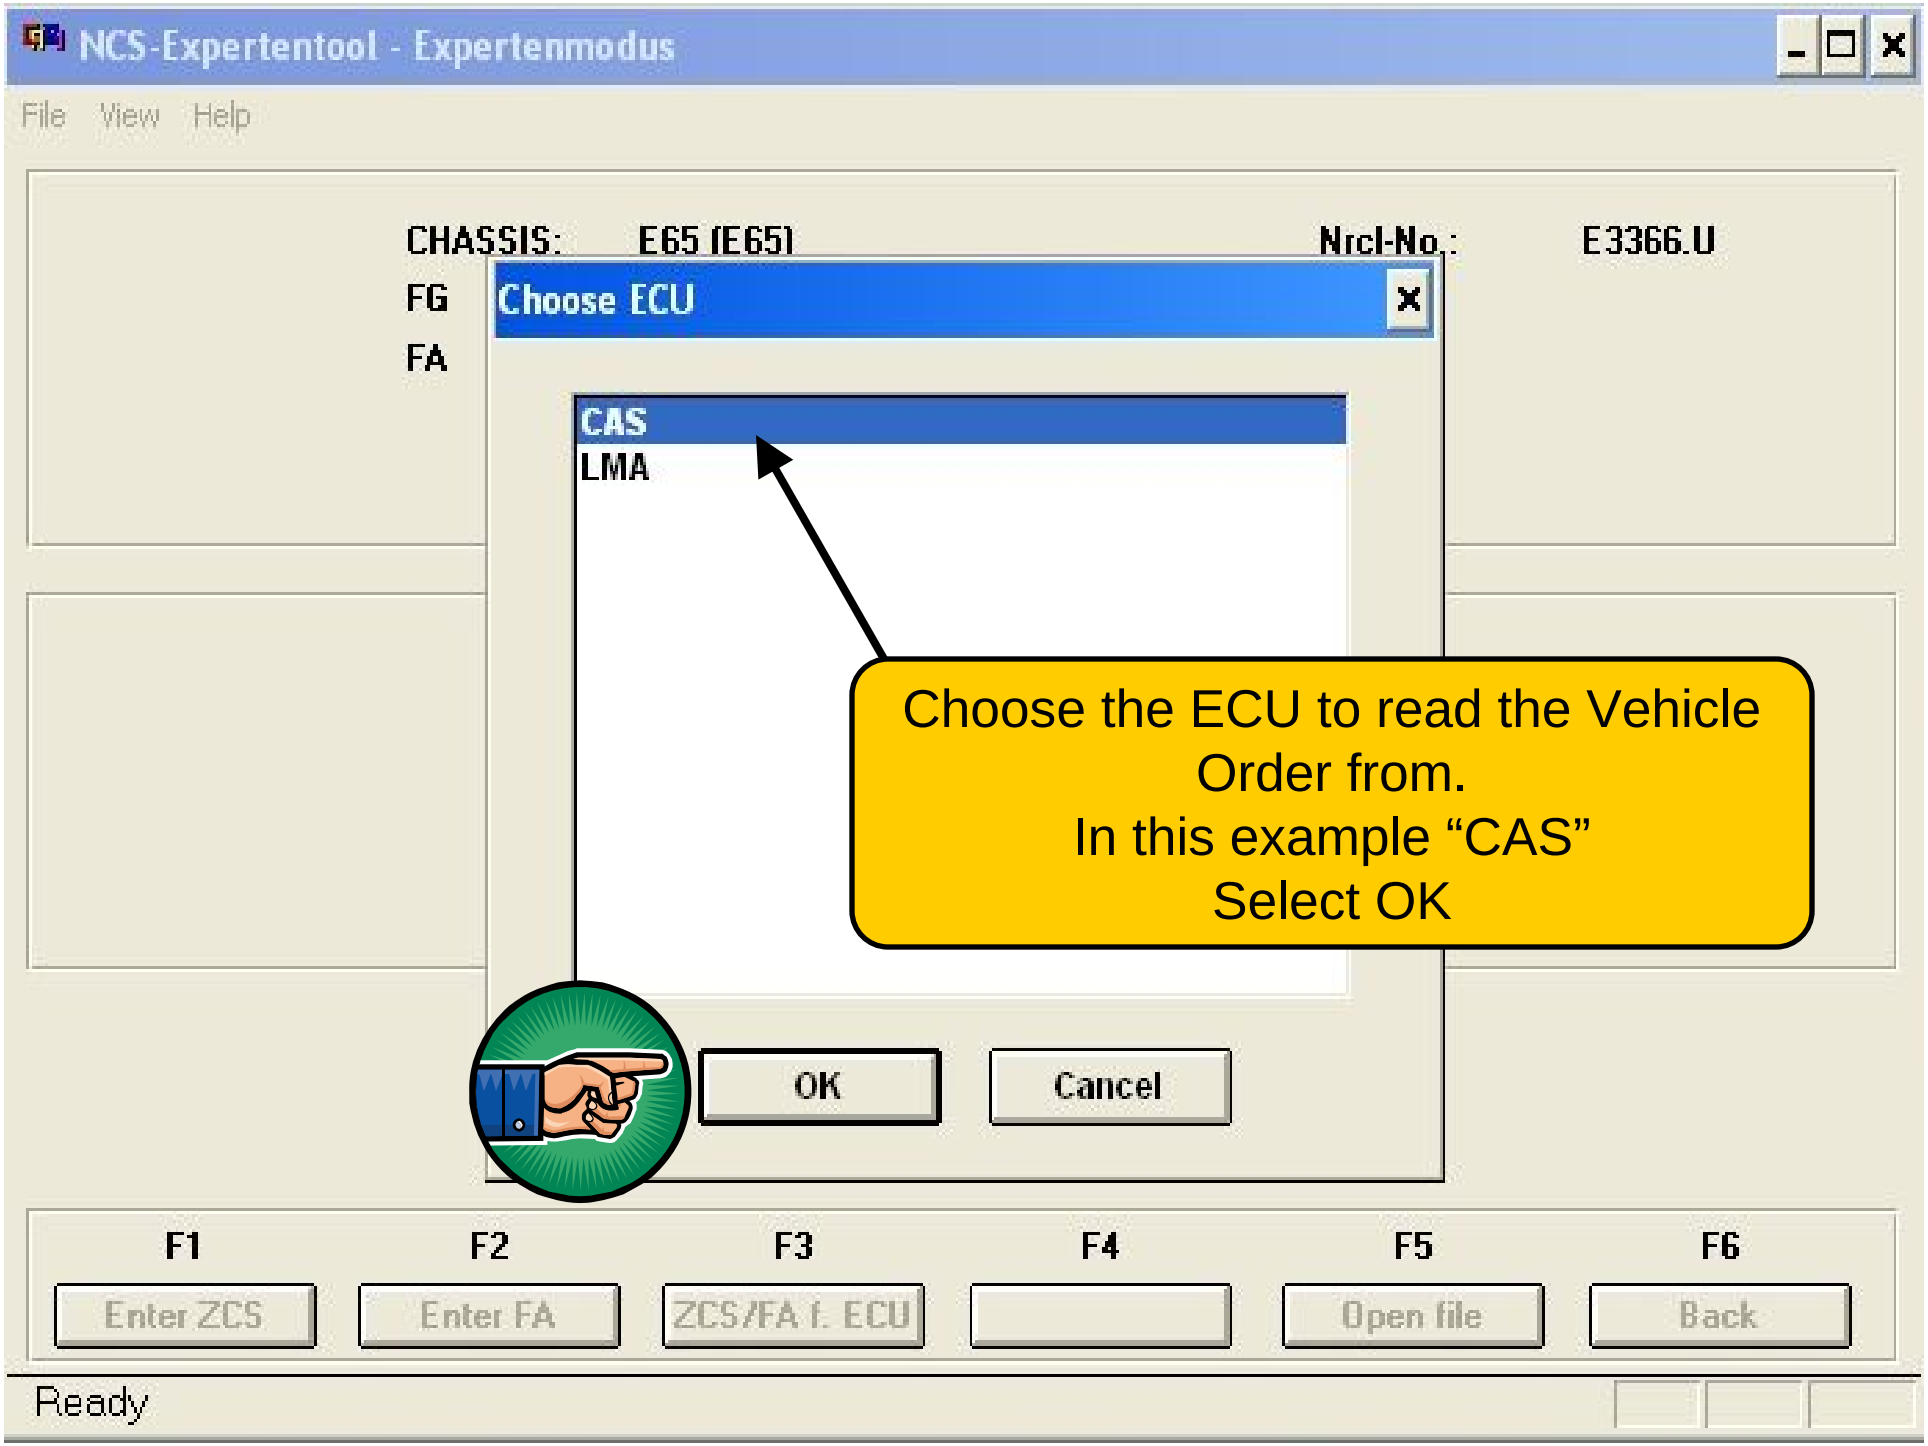
NCS-Expertentool - Expertenmodus
File View Help
CHASSIS: E65 (E65)
Nrcl-No.: E3366.U
FG
FA
Choose ECU
CAS
LMA
Choose the ECU to read the Vehicle Order from.
In this example “CAS”
Select OK
OK
Cancel
F1
F2
F3
F4
F5
F6
Enter ZCS
Enter FA
ZCS/FA f. ECU
Open file
Back
Ready

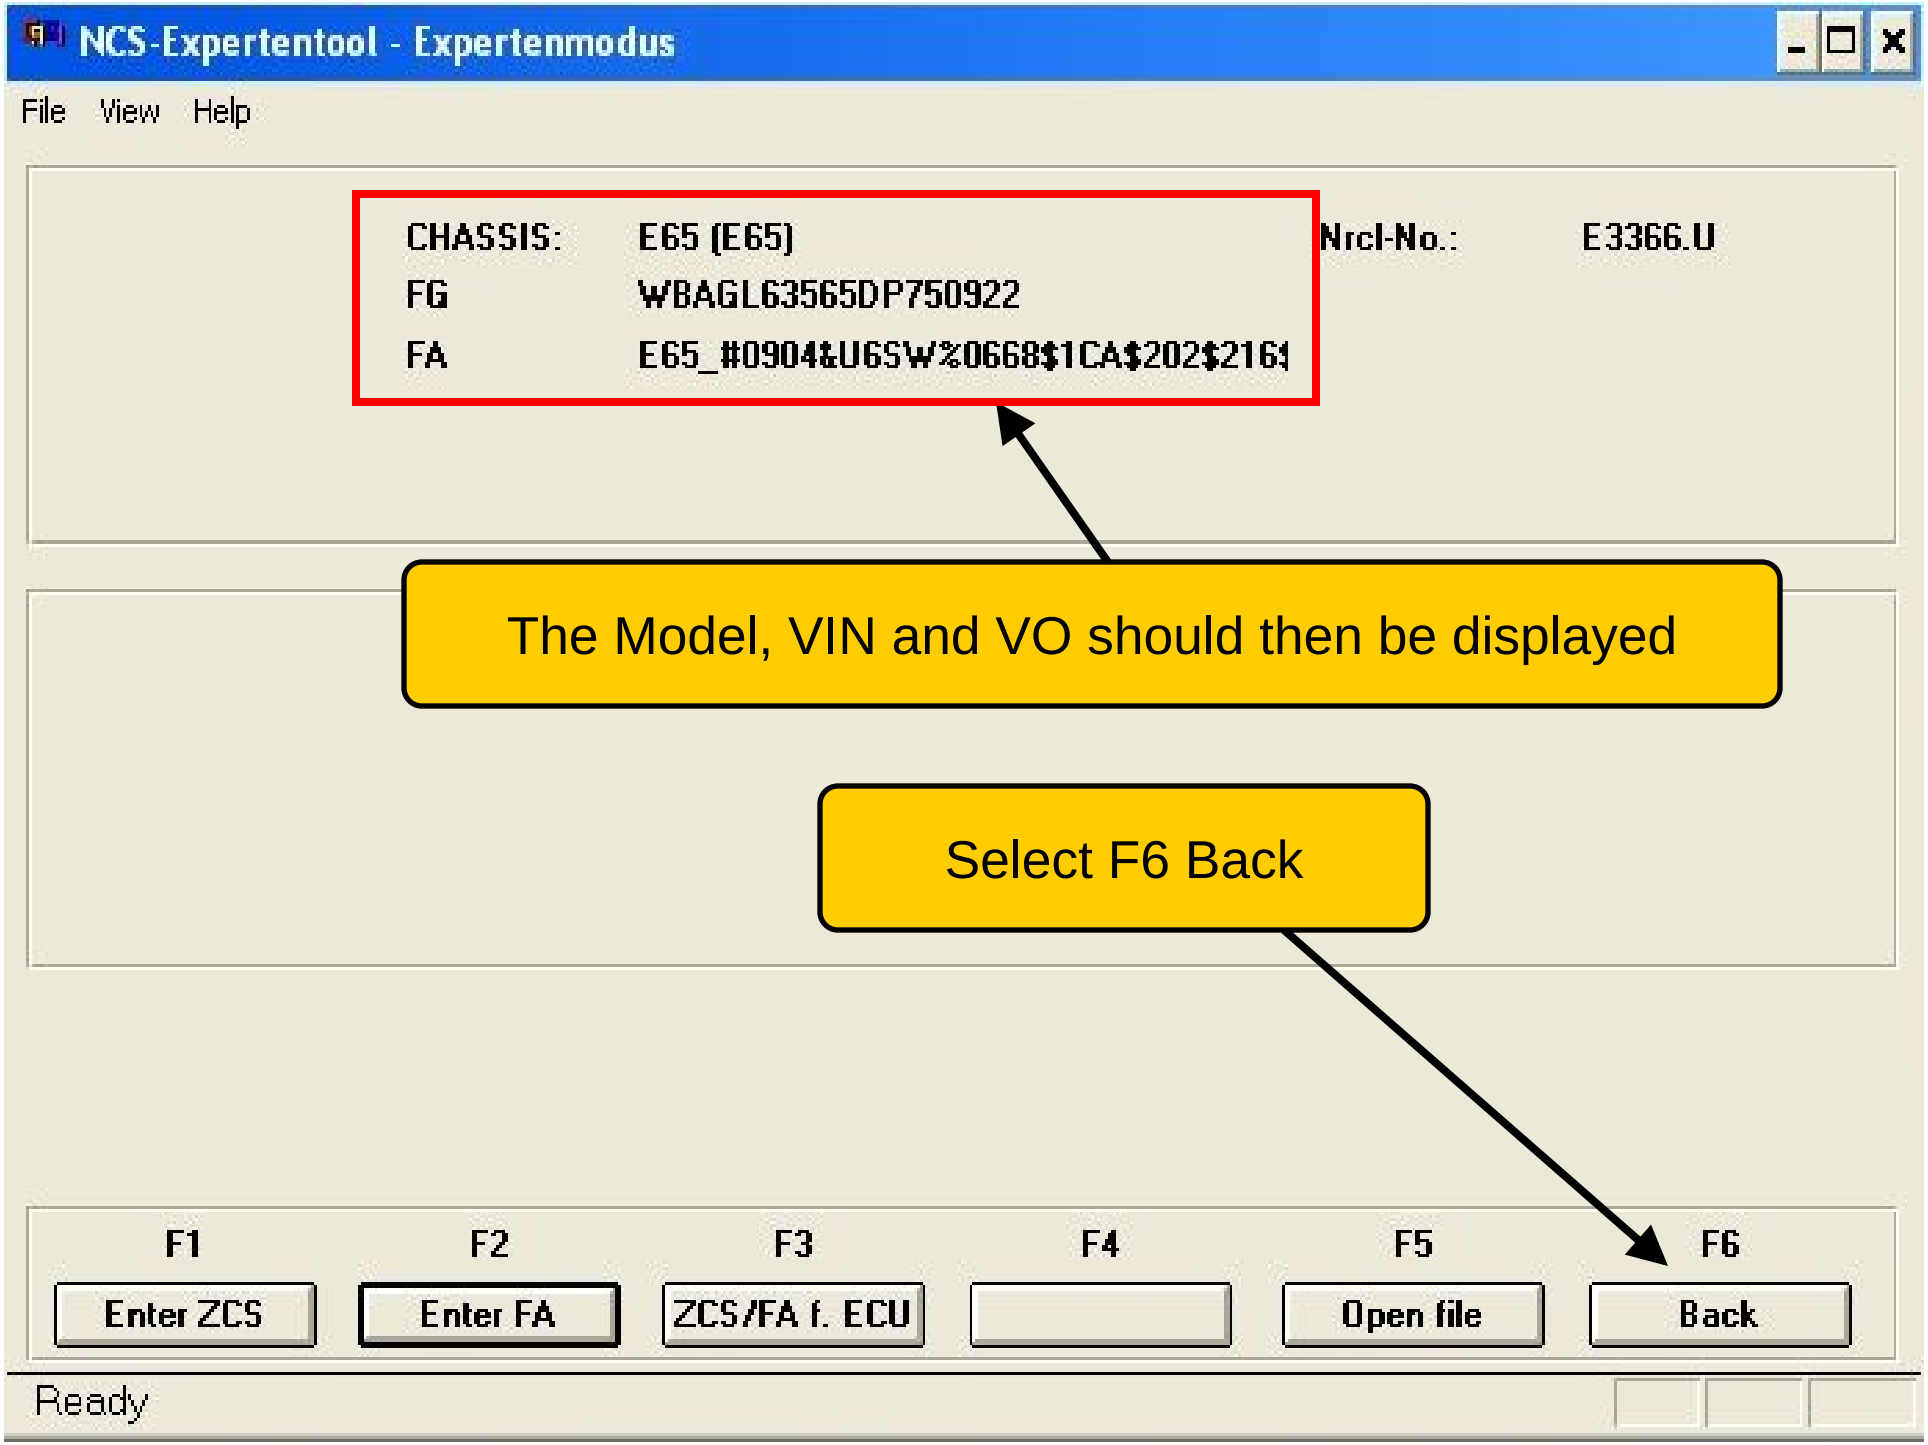
NCS-Expertentool - Expertenmodus
File View Help
CHASSIS: E65 (E65)
Nrcl-No.: E3366.U
FG WBAGL63565DP750922
FA E65_#0904&U6SW%0668$1CA$202$216
The Model, VIN and VO should then be displayed
Select F6 Back
F1 F2 F3 F4 F5 F6
Enter ZCS
Enter FA
ZCS/FA f. ECU
Open file
Back
Ready

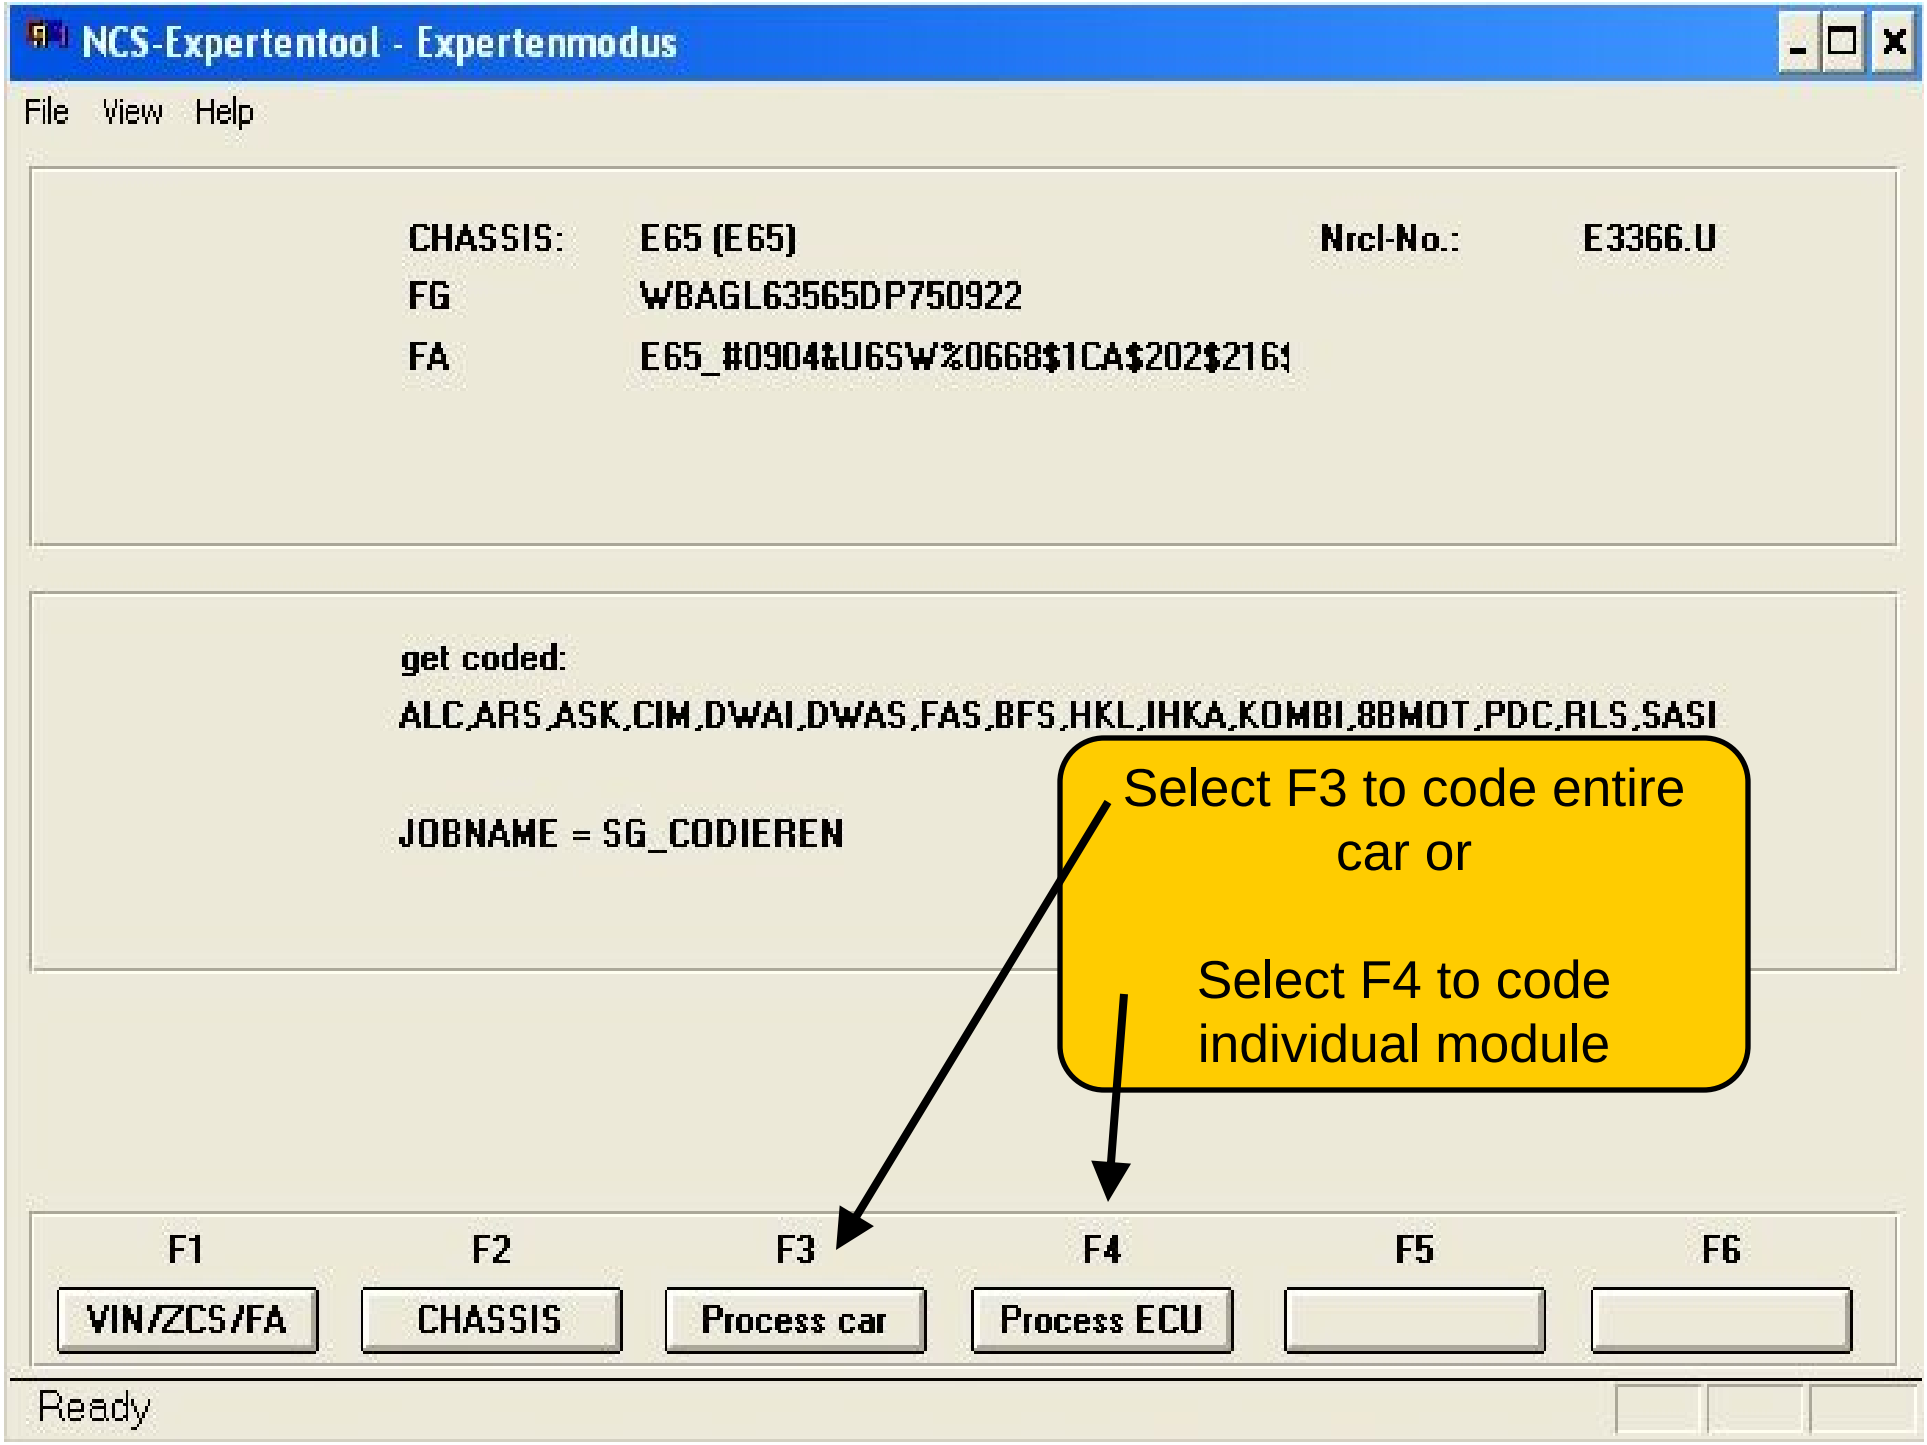
NCS-Expertentool - Expertenmodus
File View Help
CHASSIS: E65 (E65) Nrcl-No.: E3366.U
FG WBAGL63565DP750922
FA E65_#0904&U6SW%0668$1CA$202$216
get coded:
ALC,ARS,ASK,CIM,DWAI,DWAS,FAS,BFS,HKL,IHKA,KOMBI,8BMOT,PDC,RLS,SASI
JOBNAME = SG_CODIEREN
Select F3 to code entire car or
Select F4 to code individual module
F1 F2 F3 F4 F5 F6
VIN/ZCS/FA
CHASSIS
Process car
Process ECU
Ready

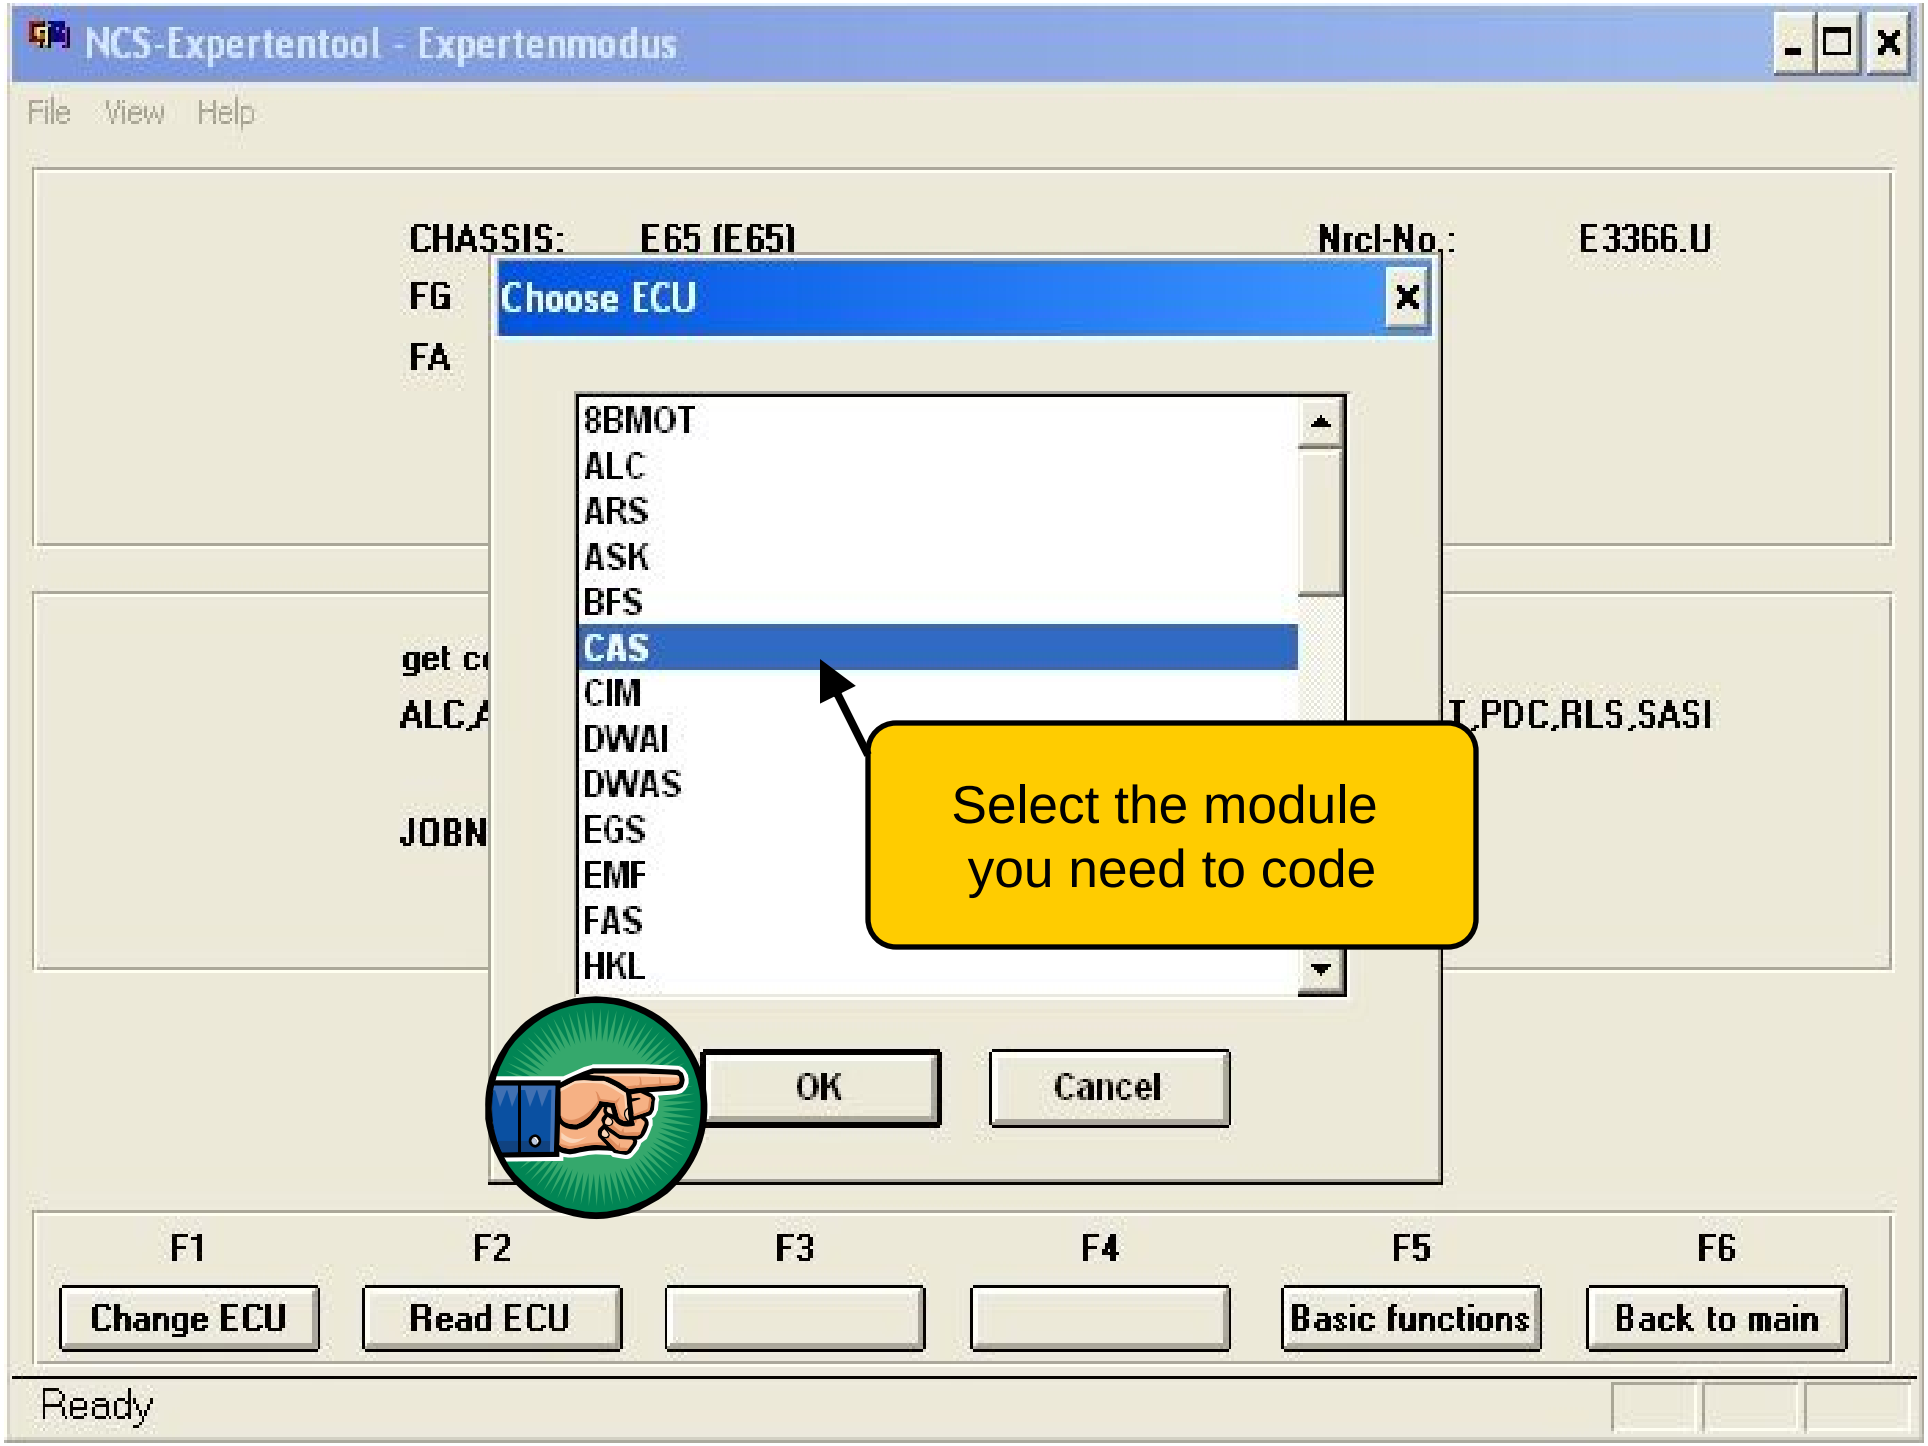
NCS-Expertentool - Expertenmodus
File View Help
CHASSIS: E65 (E65)
Nrcl-No.: E3366.U
FG
FA
Choose ECU
8BMOT
ALC
ARS
ASK
BFS
CAS
CIM
DWAI
DWAS
EGS
EMF
FAS
HKL
Select the module you need to code
OK
Cancel
F1
F2
F3
F4
F5
F6
Change ECU
Read ECU
Basic functions
Back to main
Ready

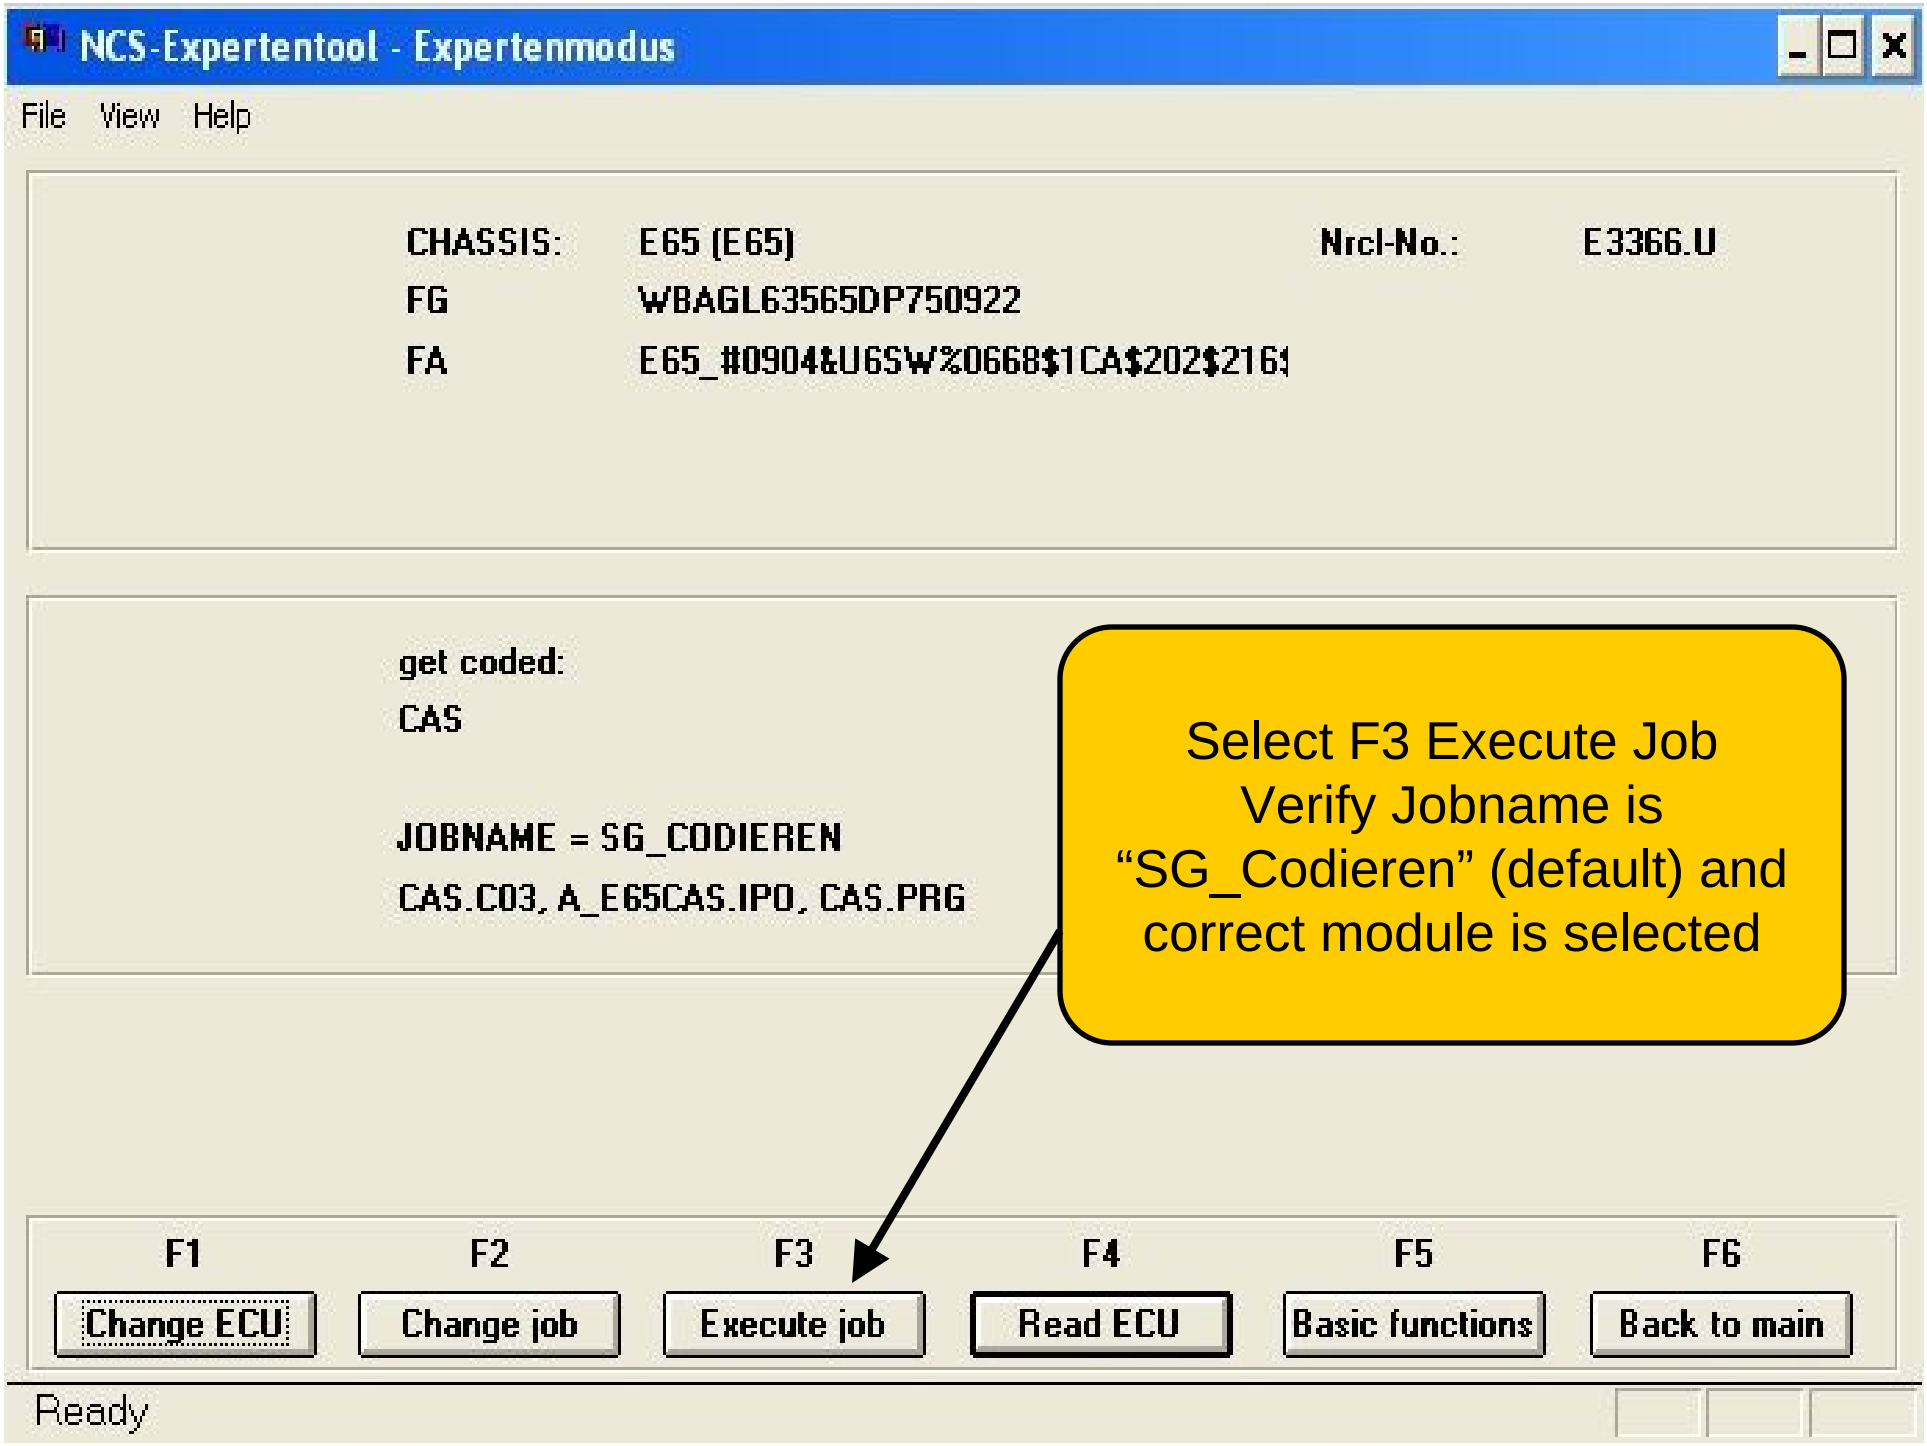
NCS-Expertentool - Expertenmodus
File View Help
CHASSIS: E65 (E65) Nrcl-No.: E3366.U
FG WBAGL63565DP750922
FA E65_#0904&U6SW%0668$1CA$202$216
get coded:
CAS
JOBNAME = SG_CODIEREN
CAS.C03, A_E65CAS.IPO, CAS.PRG
Select F3 Execute Job
Verify Jobname is
“SG_Codieren” (default) and
correct module is selected
F1 F2 F3 F4 F5 F6
Change ECU
Change job
Execute job
Read ECU
Basic functions
Back to main
Ready