65 50 011 Removing and installing (replacing) video module for on-board monitor




Necessary preliminary tasks:

- · Disconnect battery ground wire.
- Remove luggage compartment trim on side panel on left.




Note:

Follow instructions for handling optical fibers.

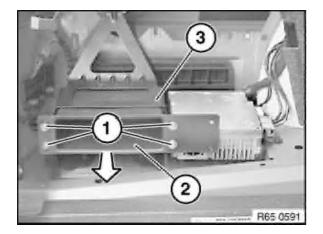

Release screws (1).

Remove storage compartment (2) in direction of arrow from holder (3).

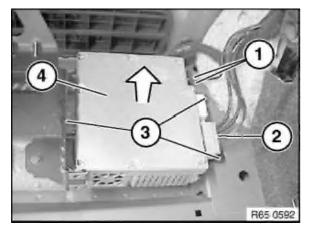

Installation:


Do not mix up antenna connectors (1).

Mark antenna plugs (1) and disconnect.

Unfasten plug connection (2) and disconnect.

Release screws (3).

Remove video module for on-board monitor (4) in direction of arrow.

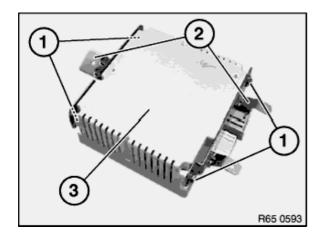

Replacement:

Release screws (1) and remove holder (2) from video module for on-board monitor (3).



Replacement:

Carry out programming/coding.